



# Contents

---

Product Overview.....	4
Identifying the Parts.....	5
Specifications .....	6
What's in the Box.....	8
Getting Started.....	9
LED status lights.....	9
Air-Stream App for Maxell Portable Wireless Hard Drive.....	10
Air-Stream App Feature	
System Requirement	
Supported File Types	
How to obtain the App(iOS/Android) .....	11
Air-Stream Basic Operation (Air-Stream Wi-Fi Setting for iOS) .....	12
Air-Stream for IOS .....	13
I. Browse Files	
II. Upload	
III. Download	
IV. Move	
V. Copy Files	
VI. File folder Variation	
i. Rename	
ii. New Directory	
iii. Delete Files/Folders	
VII. Settings	
i. Username & Password	
ii. Device Name	
iii. Security Settings	
iv. Internet Access (Internet Bridge)	
v. Power Saving	
vi. Date & Time	
vii. Admin Password	

viii. Restart	
ix. Firmware Upgrade	
x. Shutdown	
xi. Factory Default	
xii. Language	
Air-Stream Wi-Fi Setting for Android .....	33
Air-Stream Manual .....	34
VIII. Browse Files	
IX. Upload Files	
X. Download Files	
XI. Move Files & Folders	
XII. Copy Files	
XIII. File folder Variation	
i. Rename	
ii. New Directory	
iii. Delete	
XIV. Settings	
i. Username & Password	
ii. Device Name	
iii. Security	
iv. Internet Access	
v. Power Saving	
vi. Date & Time	
vii. Admin Password	
viii. Restart	
ix. Firmware Upgrade	
x. Shutdown	
xi. Factory Default	
xii. Language	
Troubleshooting .....	60
Important Safety Instructions.....	61

## Product Overview

---

### Mobile Wireless Storage

The Maxell Portable Wireless Hard Drive allows access to your personal videos, music, photos, data wirelessly and streaming it to your mobile devices such as iPad®/Tablet, Smartphones and more. By using its internal hard drive storage, there is no need to worry about running out of space on your mobile devices.

At the same time, the Maxell Portable Wireless Hard Drive has a built in rechargeable battery. You can simply plug in to any USB port to charge and back up your files as a normal 2.5 inch hard drive. The Maxell Portable Wireless Hard Drive can also be accessed while the battery is charging.

Just one click away, within a very short time, you can start to experience the power of mobile wireless life.

## Identifying the Parts

---

**Power On/ Off Button:** Switches On and Off the power of Maxell Portable Wireless Hard Drive.

**LED Indicators:** You can see the Wireless Hard Drive status by looking at the LED Lights on the top (upright position), please refer to “LED status Lights” section for LED indicator signals.

**USB 3.0 Port:** When you connect to your Notebook or PC via USB 3,0 Cable, the Maxell Portable Wireless Hard Drive can be used as a 2.5 inch portable HDD (make sure that you turn on the power)



**Note:** Always use 5V 2A (EIAJ-2) for DC power supply of this product, using wrong voltage AC adapter may cause damage to the product and may cause fire/smoke when over voltage is used. (AC adapter not included)

# Specifications

---

## General

### Interface

- ☐ IEEE 802.11b/g/n
- ☐ USB 3.0 Micro-B

### Data Transfer Rate

- ☐ Wi-Fi up to 150Mbps
- ☐ USB 3.0 up to 5Gbps

### Main Chip

- ☐ Ralink RT5350  
2.4G / WPA and WPA2
- ☐ VIA Labs VL701  
USB 3.0 / SATA II

### HDD Capacity

2.5" hard disk up to 1.5TB (SATA I or SATA II)

### HDD Format

FAT32 / NTFS

### LEDs

- ☐ Power LED : White + Blue
- ☐ Battery LED : Green + Red
- ☐ Bridge LED : Orange

### System Requirement

- ☐ Wi-Fi  
iPad®, iPhone®, iPod touch® - iOS 5.0 and above  
Android tablets and smartphones - Android 2.3 and above
- ☐ USB  
Windows XP / Vista / 7 (x86 & x64) / Mac OS X 10.x

### Product Dimension

127 / 92.4 / 20.9 mm

### Product Weight

190g (W/O HDD & Packing)

### Power Mode

Wi-Fi  
Battery / Self-Powered  
USB  
Bus-powered / Self-Powered

**Battery**

Li-Polymer 2800mAh

**Temperature**

Operating: 0 ~ 40°C

Storage: -10 °C ~ 60°C

**Humidity**

Operating: 65±20% RH non-condensing

Storage: 65±20% RH non-condensing

**Package Contents**

USB 3.0 Micro-B 60cm Cable

Quick Guide and Manual

**2 year Warranty**

## What's in the Box

---

- 1 Maxell Portable Wireless Hard Drive x 1
- 2 Quick Guide X 1
- 3 USB 3.0 Cable X1



## Getting Started

---

 
### Prepare the HDD for your first use

The Maxell Portable Wireless Hard Drive is pre-formatted as FAT32.

Windows 8/7/Vista/XP users:

- Connect your Maxell Portable Wireless Hard Drive to your computer via the USB cable attached, press the on/off switch, your computer should be able to detect and install this product automatically.
- Copy video/audio/picture files to Maxell Portable Wireless Hard Drive according to the pre-set folders (Video files-> videos, picture files->Pictures)

### LED status lights

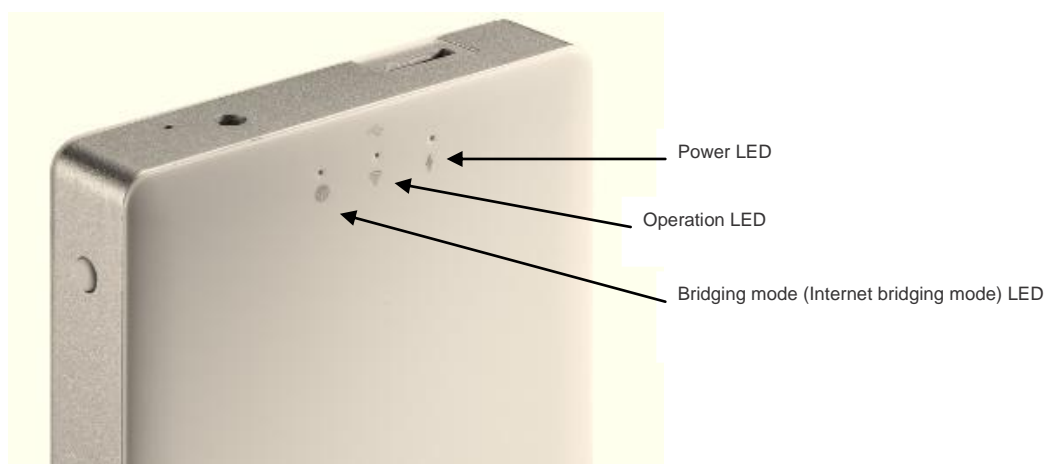

Operation LED: White (Wi-Fi mode) or Blue (USB HDD mode)

In Wi-Fi mode:

- White light on : power on
- White light off : power off
- White blinking : In operation(data transfer)\*

In USB HDD mode:

- Blue light on : power on
- Blue light off : power off
- Blue blinking : In operation(data transfer)\*

Battery LED: Green or Red

In operation:

- Red: battery < 30%
- Off: battery > 30%

Charging mode

- Off : battery full
- Green: battery > 30%
- Orange: battery < 30%

Bridging mode(Internet bridging mode) LED : Orange

- Orange light on: bridge connection ready
- Orange light off: bridge disconnected/bridging mode off



## Air-Stream App for Maxell Portable Wireless Hard Drive

The Air-Stream App is designed for and works with the **Maxell Portable Wireless Hard Drive**. You can download from iTunes App Store® or Google Play.

For how to install the App, please refer to **How to obtain the App(iOS/Android)**

---

### Air-Stream App Features:

- Allows tablets and smartphones stream all the media files, documents wirelessly.
- Supports 5 devices streaming video at the same time.
- Supports 5 devices accessing documents, music and photos.
- File Management.
- Take and upload a photo to WiFi storage.
- Record and upload a video to WiFi storage.
- WiFi storage settings.

### System Requirement:

- Android 4.0 and above.
- iOS 5.0 and above.

### Supported File Types:

<b>Photo</b>	<ul style="list-style-type: none"><li>• Android bmp / gif / jpg / jpeg / png</li><li>• iOS bmp / gif / jpg / jpeg / png / tiff</li></ul>
<b>Video</b>	<ul style="list-style-type: none"><li>• Android avi* / divx* / mkv / mov* / mp4 / mpg* / mpeg*</li><li>• iOS mov / mp4</li></ul>
<b>Music</b>	<ul style="list-style-type: none"><li>• Android m4a / mp3 / wav / wma*</li><li>• iOS m4a / mp3 / wav</li></ul>
<b>Document</b>	<ul style="list-style-type: none"><li>• Android doc* / docx* / htm / html / pdf* / ppt* / pptx* / rtf* / txt / xls* / xlsx*</li><li>• iOS doc / htm / html / pdf / ppt / rtf / txt / xls</li></ul>

\* Supported by open another app. (Android only, proper apps need to be installed).

## How to obtain the App(IOS/Android)

 
Android devices:

Search “Air-Stream” in Google play market:



IOS devices:

Search “Air-Stream” in App store® or iTunes® website:

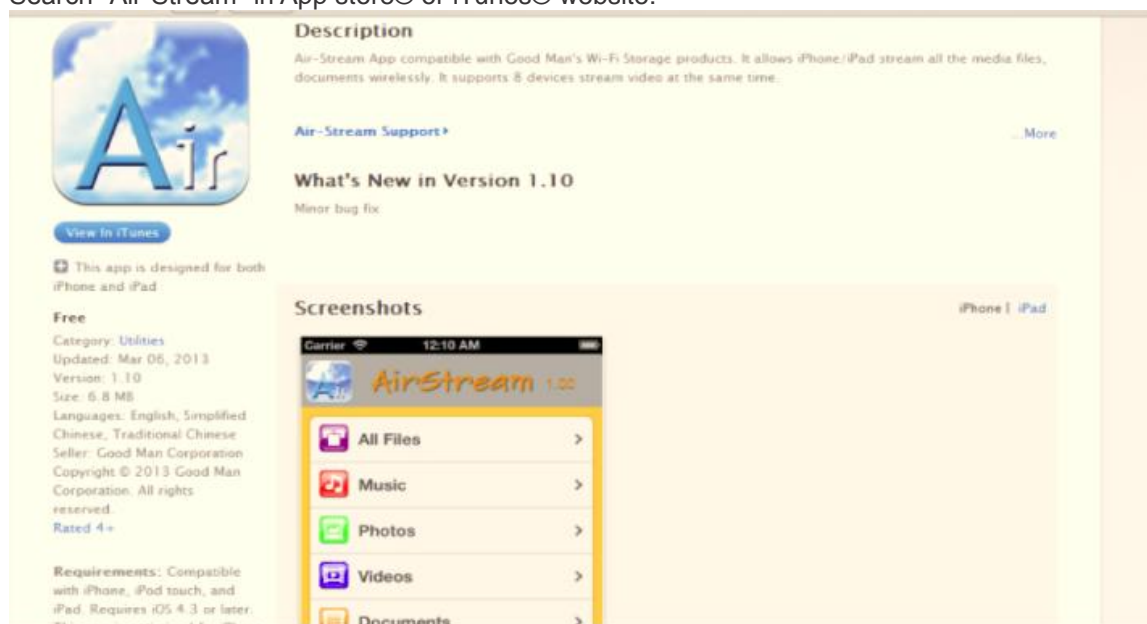

## Air-Stream for IOS

### Connecting the device:

Step 1: After installing the Air-Stream App, power on the device. Search for the wifi connection named "Max-Stream\_xxx"

(xxx is the last 4 digit of the MAC address of your device.)

Tap **MAX-Stream\_XXX** on the Wi-Fi Manager, and then enter password **12345678**.

Step 2: After successful connected to Maxell Portable Wireless Hard Drive, launch the Air-Stream App by tapping the icon.



## I. Browse Files


Browse all the files, including documents, music, photos, and videos, on the remote device (Portable Wireless Hard Drive), or the local files on the local side (your Smartphone/Tablet/device).

To browse MP3 files as an example. All files> Music > \*.mp3

 
 
 
Step 1. Tap **All Files**

Step 2. Tap **music** folder to browse all MP3 files.

Step 3. Tap a file to play music.

Back: Tap the icon  on the grey bar to go back the previous layer.

Main menu: Tap the icon  on the upper left corner to return to the Main Menu.

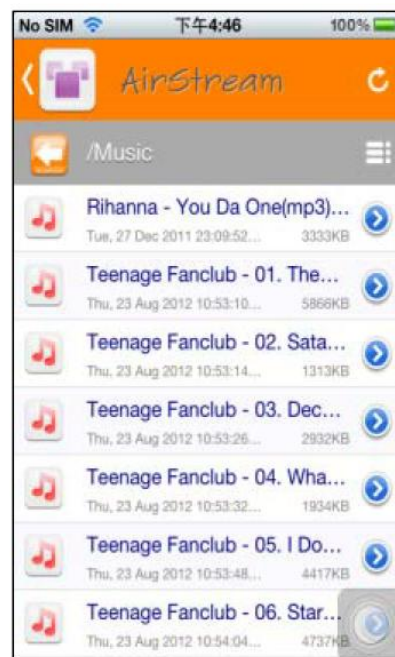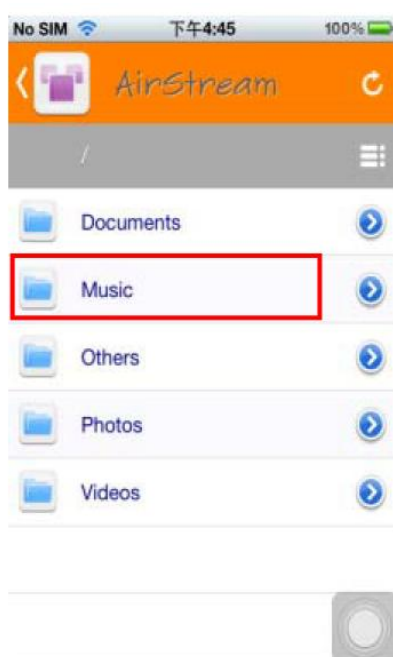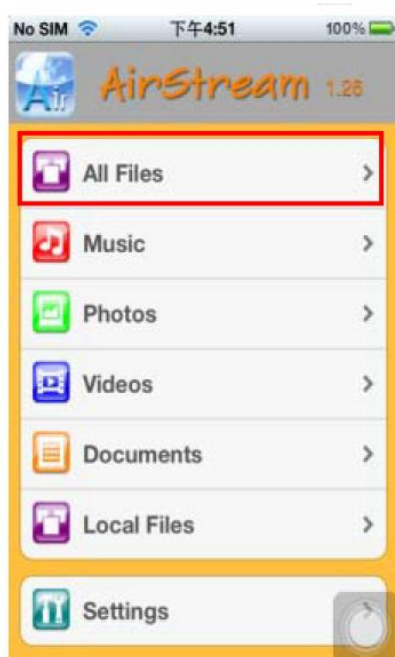

## II. Upload files

Upload files from the local files to Maxell Portable Wireless Hard Drive.

Upload files from **Local Files** to the remote device. The App will upload files to the target folder according to filename extensions, including documents, music, photos, and videos. Other kinds of files will go to the **Others** file folder.

Example on how to upload music files.

 
Step 1. Tap **Local Files**.

Step 2. Tap Music (  **Music** )

Step 3. Select music files and tap upload , or tap  to select all music files.

Step 4. Tap **Upload** on the grey bar at the bottom. Or tap **X** to cancel.

You can use the same way to upload other files such as documents, photos, videos, and other kinds of files.

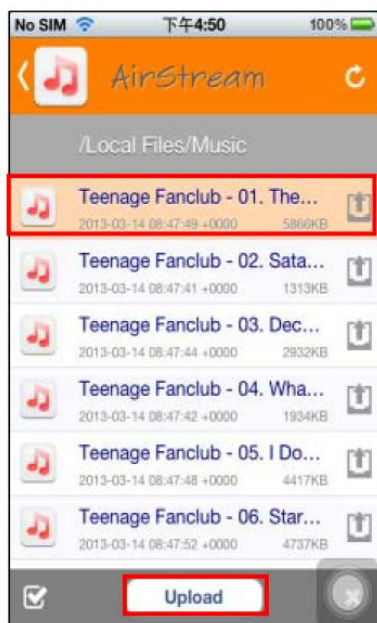



### III. Download files

Download files from the Maxell Portable Wireless Hard Drive to local storage.

Download files from the Maxell Portable Wireless Hard Drive, including documents, music, photos, and videos, to **Local Files**, and the App will download files to your target folder according to filename extensions. For files not defined as music, such as photos, videos, or documents – these will go to the **Others** folder.

There are two ways to download music files.

1. All Files > Music > mp3 songs

 
Step 1. Tap **All Files** > **Music**  **Music**

Step 2. Tap the blue icon  on the right of a music file

Step 3. Select **Download**, or tap to  select all music files.

Step 4. Tap **Download** on the gray bar at the bottom. Or tap **X** to cancel.

You can use the same way to download other files such as documents, photos, videos, and other kinds of files.

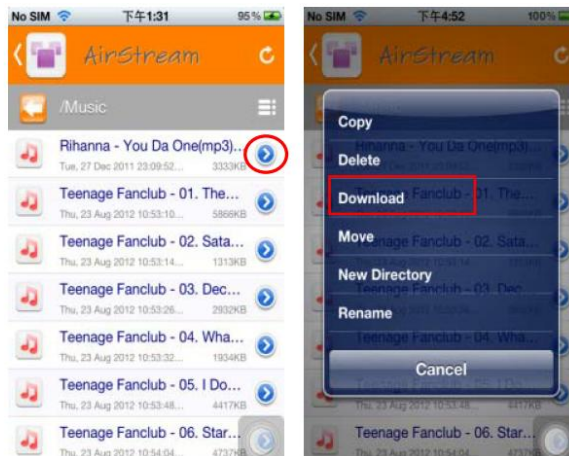

- 2.

Step 1. Tap **Music**  **Music**

Step 2. Select music files and tap , or tap  to select all music files.

Step 3. Tap **Download** on the gray bar at the bottom. Or tap **X** to cancel the action.

You can use the same way to download other files such as documents, photos, videos, and other kinds of files.



## IV. Move files/folders

You can move a file or a folder within the app, below are the steps on moving file/folders

### 1. Move a file:

Move a file from a files folder to a target folder:

For example: to move a music file:

All Files > Music

Step 1. Tap **All Files** and then tap **Music**  **Music**

 
Step 2. Tap the blue icon  on the right of a music file.

Step 3. Select **Move**

Step 4. Go to target folder. Ex. /Music → / **Others**

Step 5. tap **Move** on the bottom bar. Or tap **X** to cancel.

You can use the same way to move other folders such as documents, photos, videos, and other kinds of files.

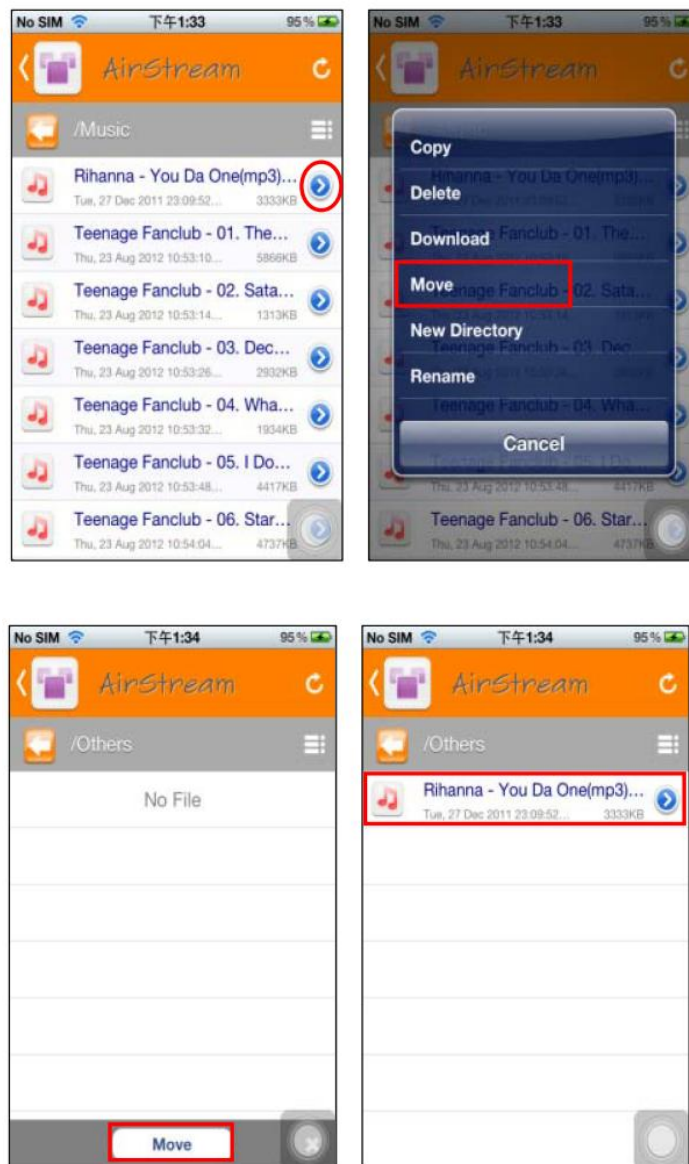



## 2. Move a folder

Move a file folder to another location.

For example: To move a file folder named 01. favourite  
(Please see New Directory on how to add a new folder)

All Files > 01.favorite → All Files > Music > 01. Favorite

Step 1. Tap **All Files**

 
Step 2. Tap the blue icon ➡ on the right to the folder.

Step 3. Select **Move**.

Step 4. Tap **Music** folder

Step 5. Tap **Move** on the bottom bar. Or tap **X** to cancel.

You can use the same way to move other files such as documents, photos, videos, and other kinds of files.

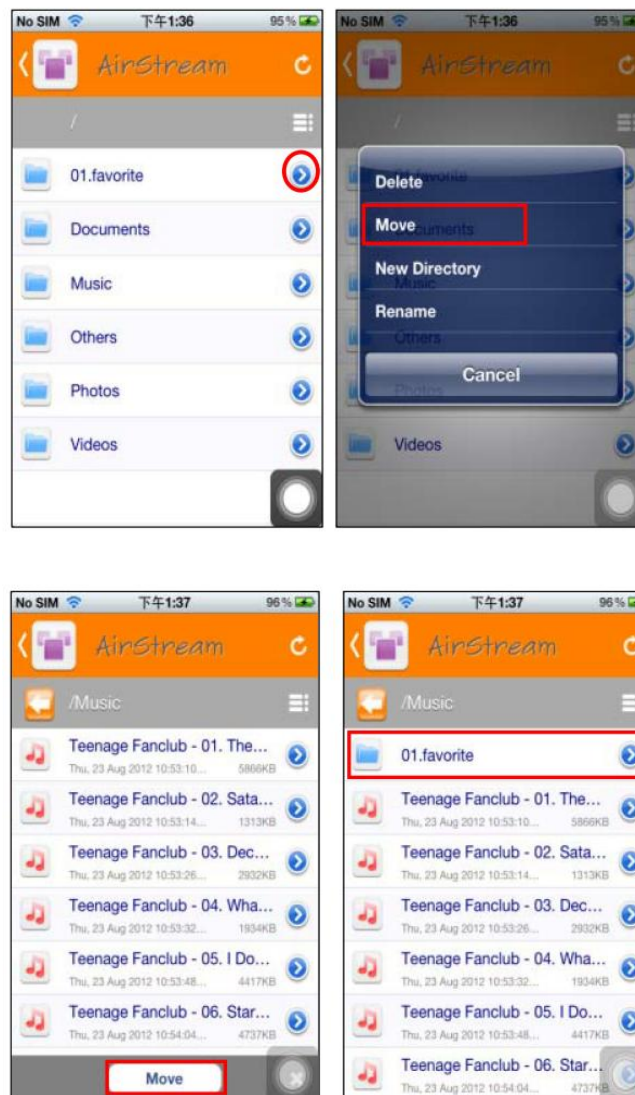

## V. Copy files

Copy files and paste to the target file folder.

For example, copy a music file from folder to folder.

All Files > Music > \*.mp3 → Others >

Step 1. Go to All Files > Music.

 
Step 2. Tap the blue icon ➡ on the right of a music file.

Step 3. Select **Copy**.

Step 4. Go to target folder. Ex. / Music → **Others**

Step 5. Tap **Paste**. Or tap **X** to cancel.

You can use the same way to copy other files such as documents, photos, videos, and other kinds of files.

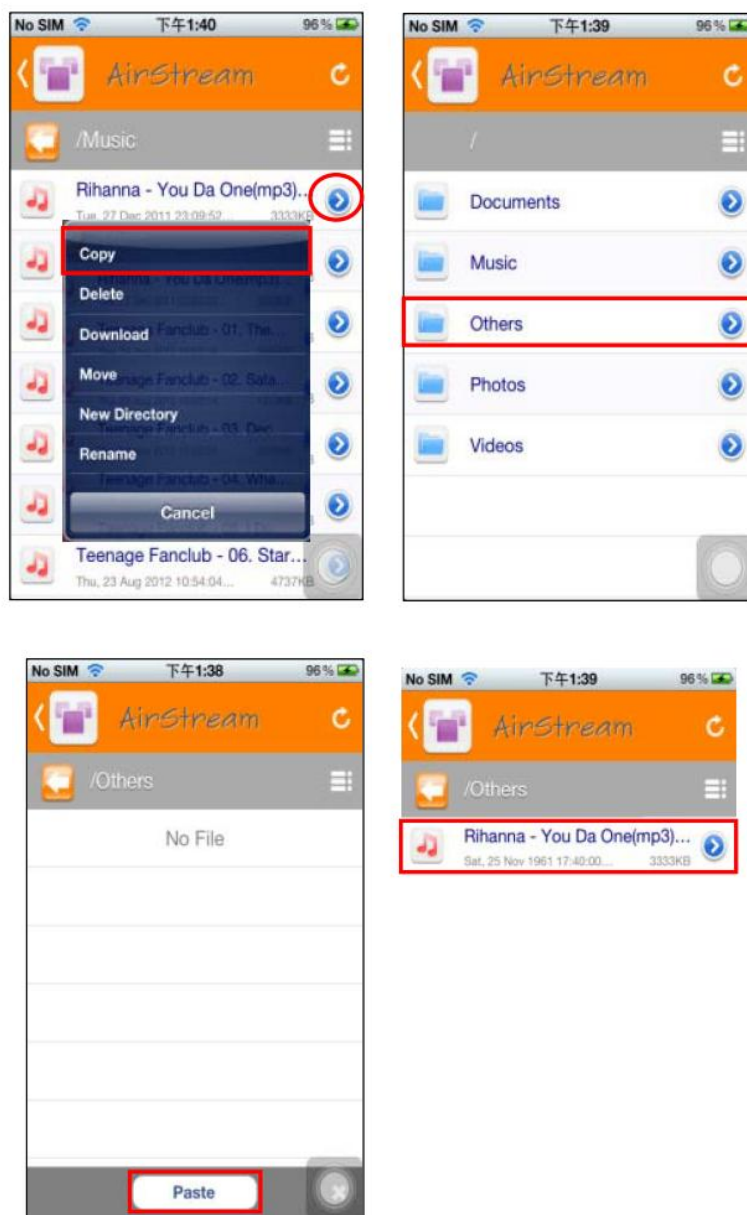


## VI. File Folder Variation

### i. Rename

Example. Rename Rihanna-You Da One(mp3) to be 01.Rihanna-You Da One(mp3).

 
All Files > music

Step 1. Tap the blue icon  next to the file you want to rename. ex. Rihanna-You Da One(mp3)

Step 2. Select **Rename**.

Step 3. Modify file name 01. Rihanna-You Da One(mp3) and tap **OK**. Or to tap **Cancel** to cancel this operation.

You can use the same way to copy other files such as documents, photos, videos, and other kinds of files.

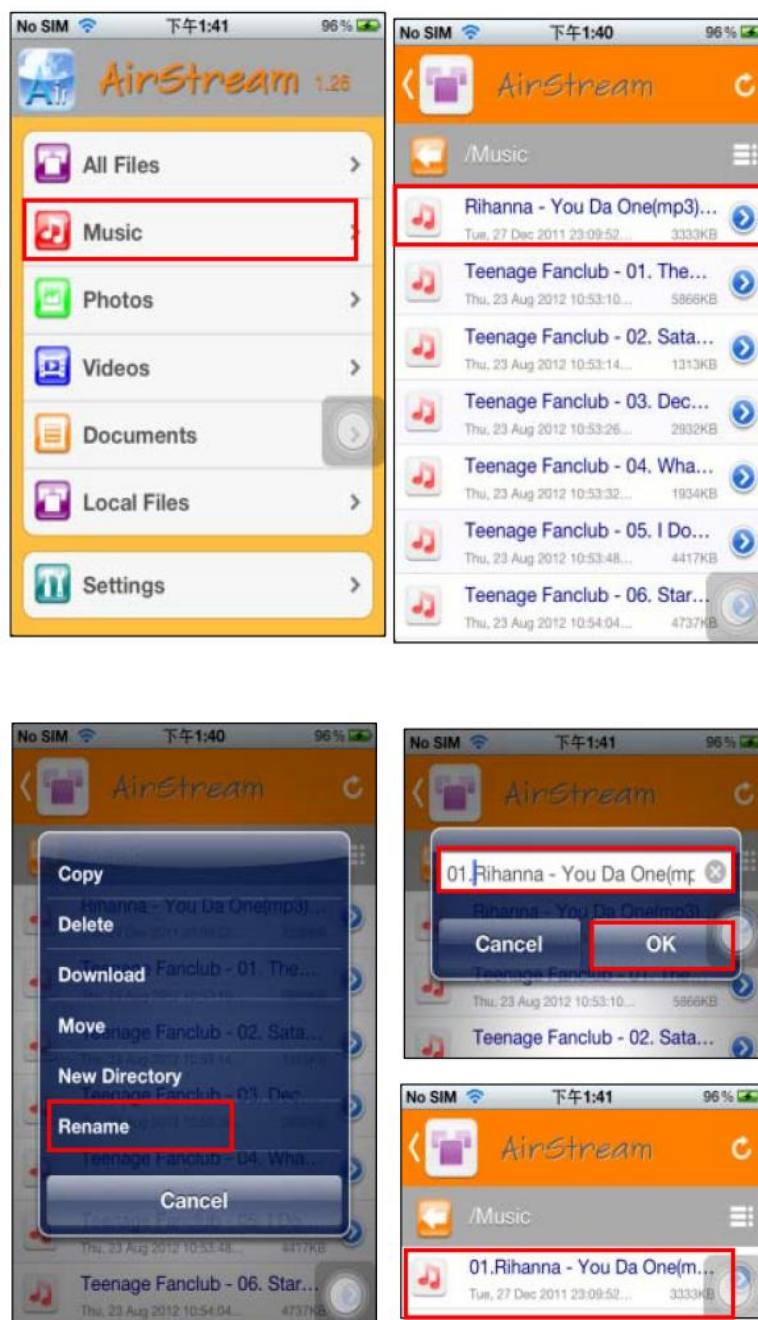

## ii. New Directory

Add a new file folder.

There are two ways to add new file folders.

 
In folder view page:

Step 1. Tap the blue icon  next to a file folder (Document/ Music / Photos/ Videos).

Step 2. Tap **New Directory**.

Step 3. Enter a name for the new folder.

Step 4. Tap **OK**. Or tap **Cancel** to cancel this operation.

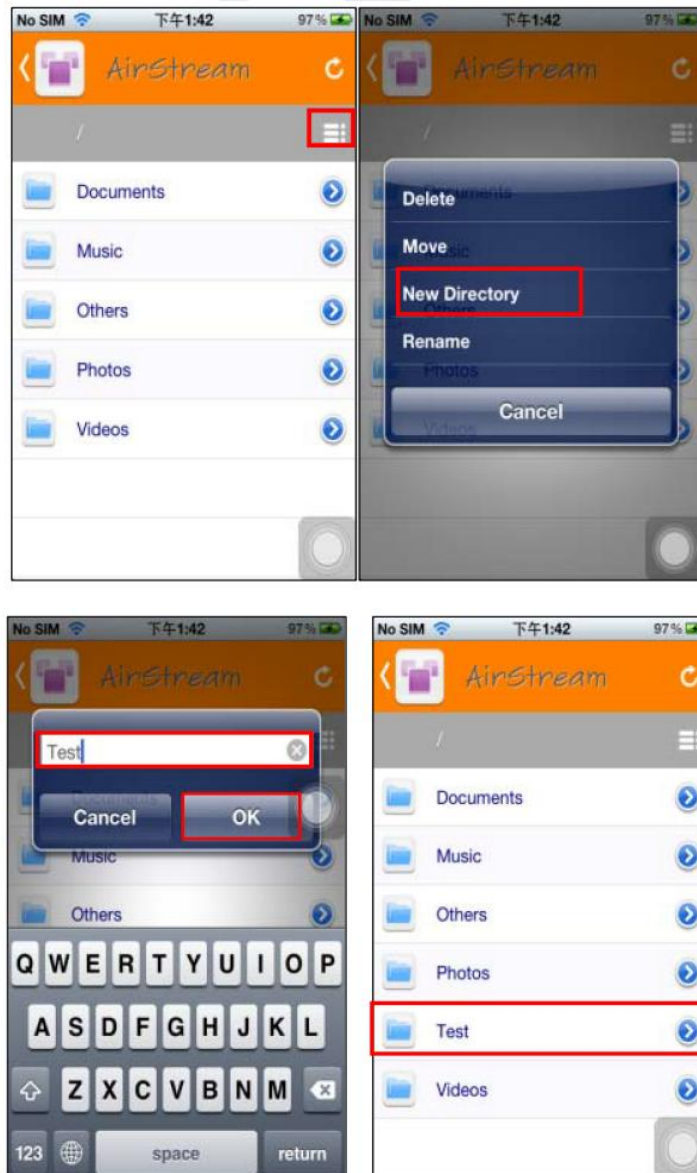

### iii. Delete Files/Folders

Delete files or file folders.

For example, delete all files in a folder

 
Step 1. Tap the blue icon ➡ next to the file folder that you want to delete.

Step 2. Select Delete

Step 3. Tap Yes to confirm. Or tap No to cancel.

You can apply the same procedure when deleting a file.

If you delete the default folders, like “Documents”, “Others”, “Photos”, “Videos”, or “Music”, it will be rebuilt once the device restarts.

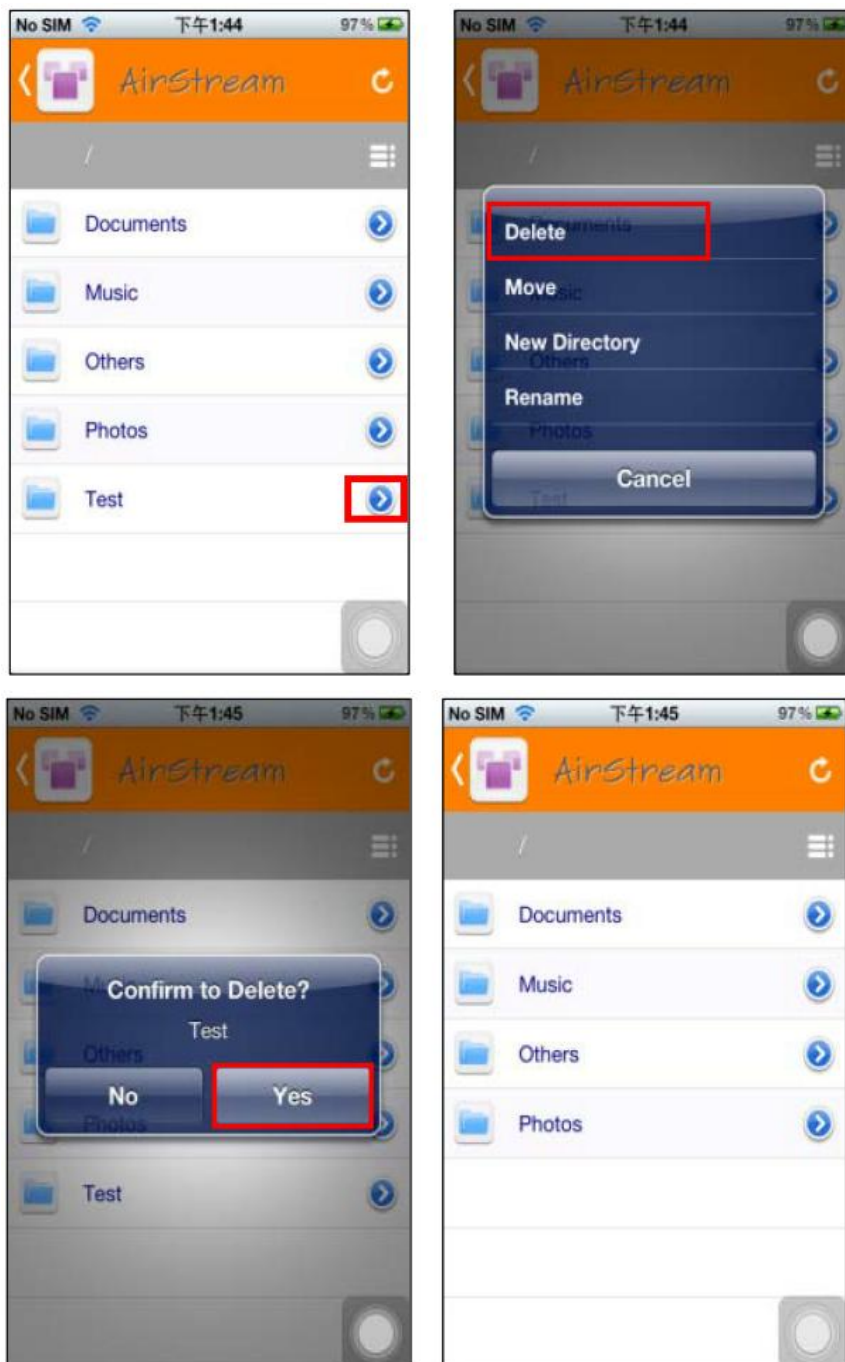



## VII. Settings

 
### i. Username and Password

Enter the username and password

Setting page allows users to change the setting on your Maxell Portable Wireless Hard Drive

Enter username and password

1. Once you tap **Settings**, it will pop up a login box, asking you to enter the username (**admin**) and your password (**admin**).
2. Then tap **Login**.

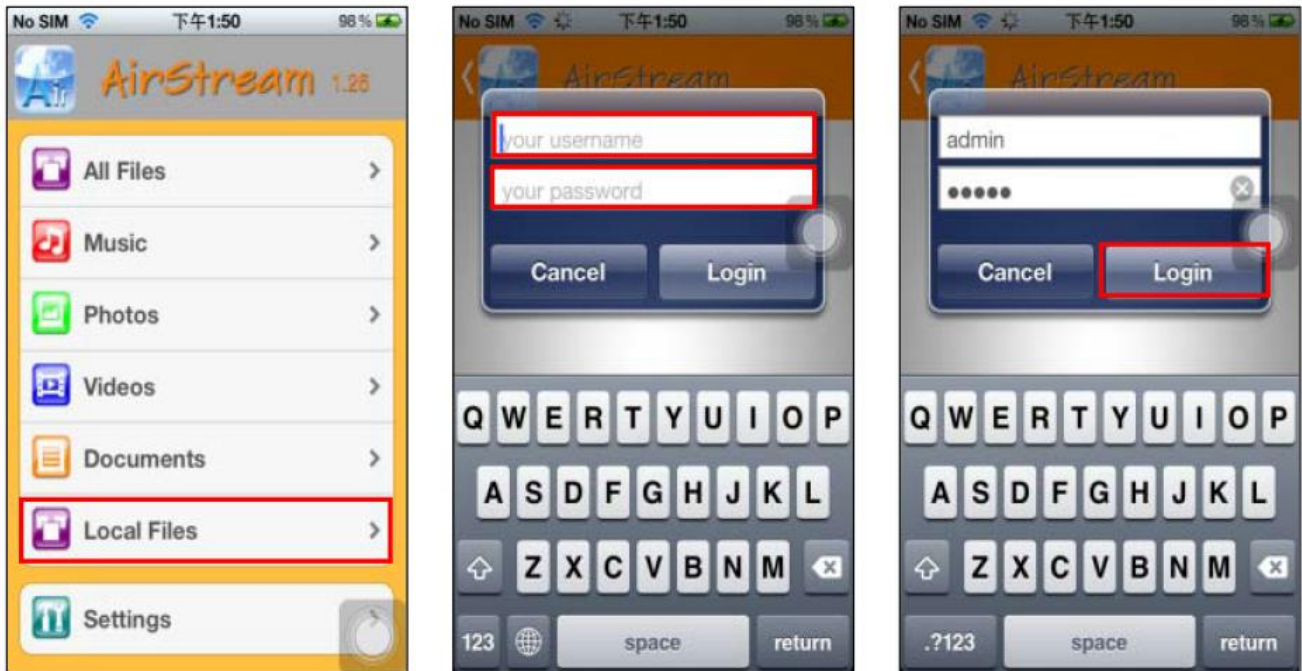


### ii. Device Name (SSID)

Note: The device name is equal to the SSID of the wifi connection of this Maxell Portable Wireless Hard Drive.

Step 1. Tap **Device Name**.

Step 2. Enter new device name and tap **Apply**.

 Step 3. The device will automatically reset, please connect again.

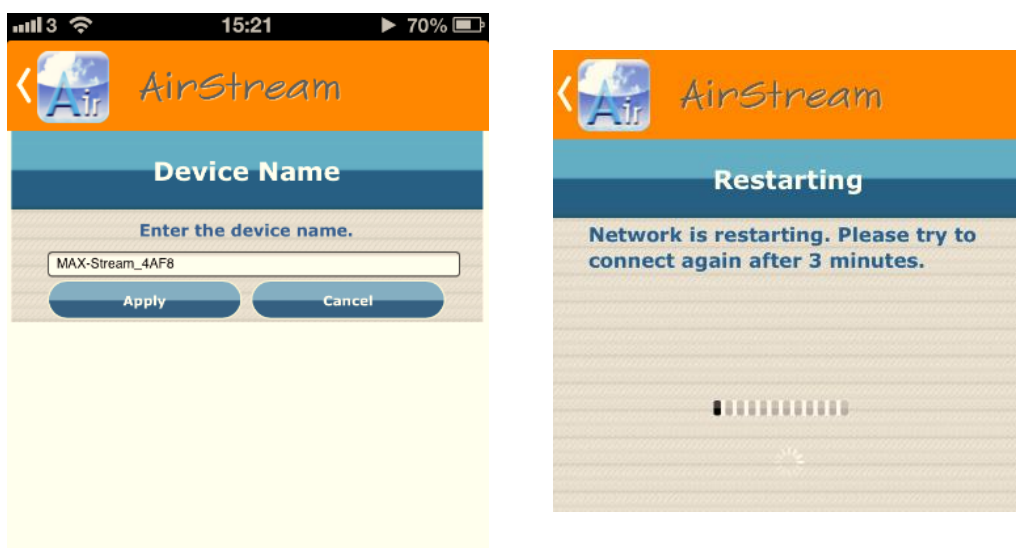


### iii. Security Setting

Set up security password and security status.

Default password is **12345678**. You can set your own password.

Security:

 - i) **Enable** means to enter password (Default: **12345678**) when login the device.
- ii) **Disable** means to disable password requirement when connect the device.

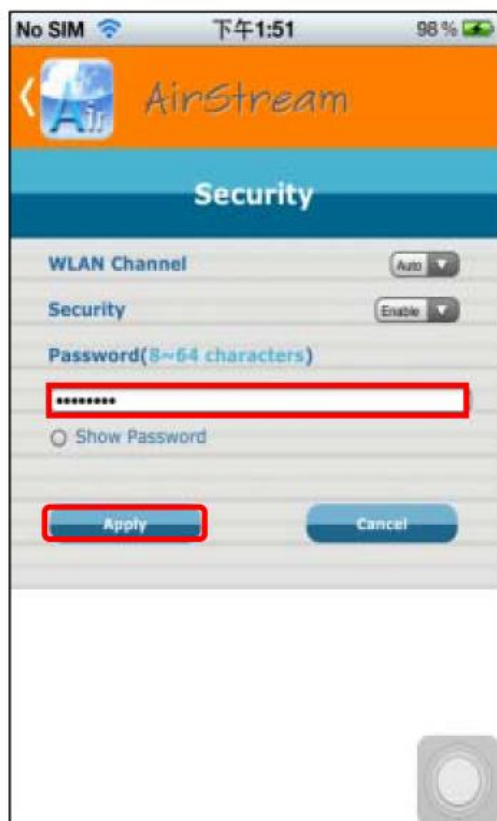

#### iv. Internet Access (Internet Bridge)

This device has an internet bridging function which enables users to connect to the Internet through their Smartphone/Tablet/device (using the Air-Stream App).

Disable means the device doesn't open Internet access, and it only provides Wi-Fi connection with the Notebook/Tablet or the Smartphone.

Enable means the device provides Internet access, which lets users connect to the internet.

 
Step 1. Tap Enable to turn on Bridge mode. It will search available internet access points(AP).

Step 2. Tap on the AP you want to connect and tap **Apply**.

Step 3. App will ask you to provide internet password, and then tap **Connect**.

Step 4. It will ask for permission to restart.

Step 5. Tap **OK** and it will pop up a restarting countdown message.

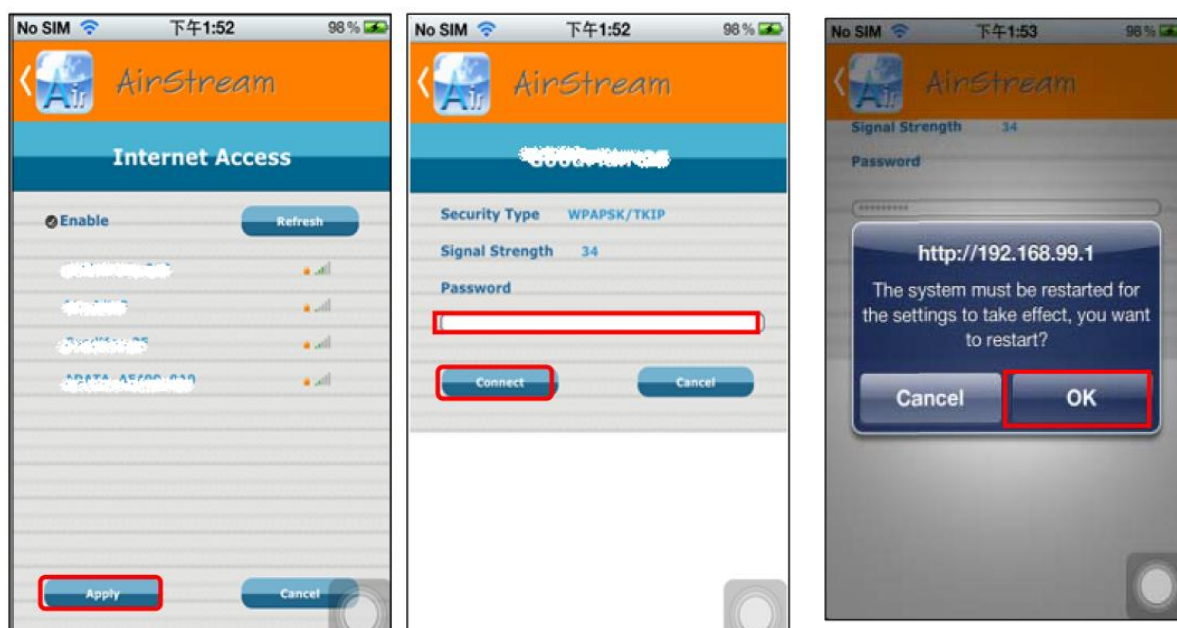




## V. Power Saving

Set up idle time (5 min/ 10 min/ 30min) to avoid power consuming.

The device will shut down after idle time.

**None** means that the device will not operate the power saving function.

 Select idle time and tap **Apply** to confirm; otherwise **Cancel** the action.

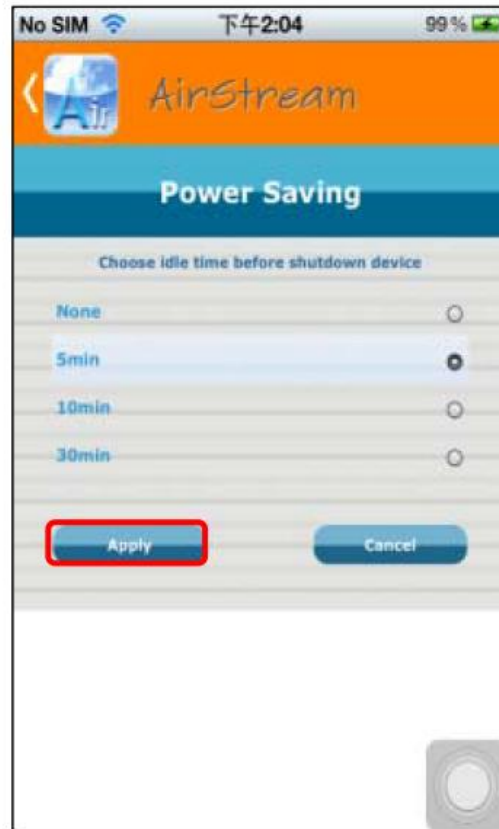


## Vi. Date & Time

Date & Time will show up after file uploading or file downloading.

There are two ways to set this up:

 
1. Select Time Zone from the drop-down list and key in the date and time separately.
2. Tap Copy from PC to get information from Notebook or smartphone directly.
3. Tap Apply to confirm. Or tap Cancel to leave.

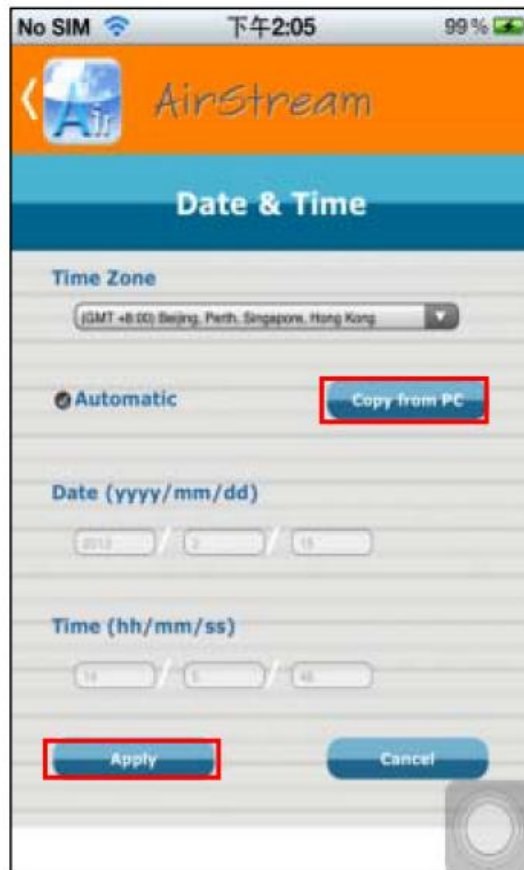

Vii. Admin Password

Change password through the login Settings page.

 Enter the new password and confirm the new password. Tap **Apply** to set up new admin password, or **Cancel** and leave.

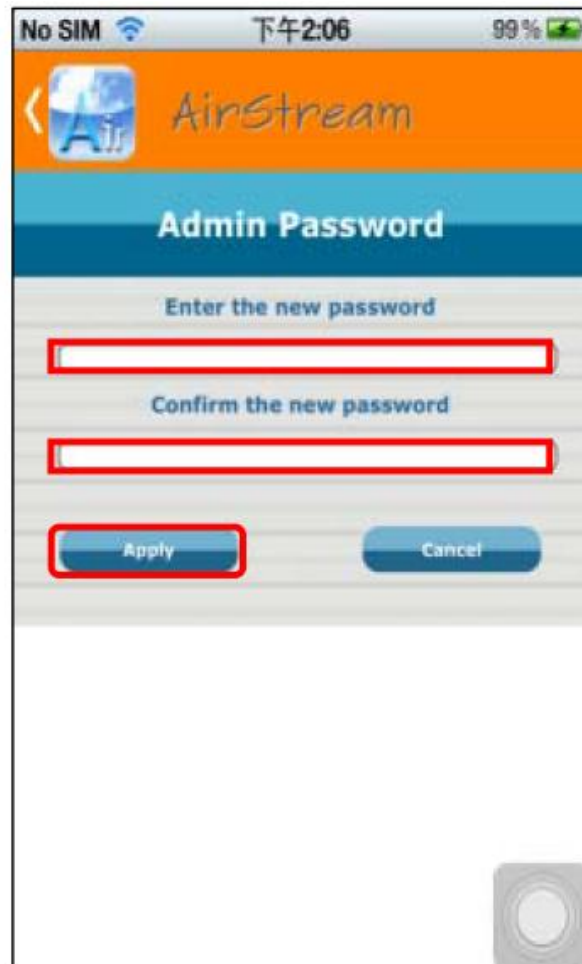


The screenshot shows the 'Admin Password' settings page of the AirStream application. The status bar at the top indicates 'No SIM', signal strength, the time '下午2:06', and 99% battery. The app's header features a back arrow, the AirStream logo, and the name 'AirStream'. The main title 'Admin Password' is displayed in a blue bar. Below this, there are two input fields: 'Enter the new password' and 'Confirm the new password', both highlighted with red rectangles. At the bottom, there are two buttons: 'Apply' (highlighted with a red rectangle) and 'Cancel'. A home indicator bar is visible at the very bottom of the screen.

## Viii Restart

 Restart the device.

Tap **Apply** to restart, or tap **Cancel** to leave.

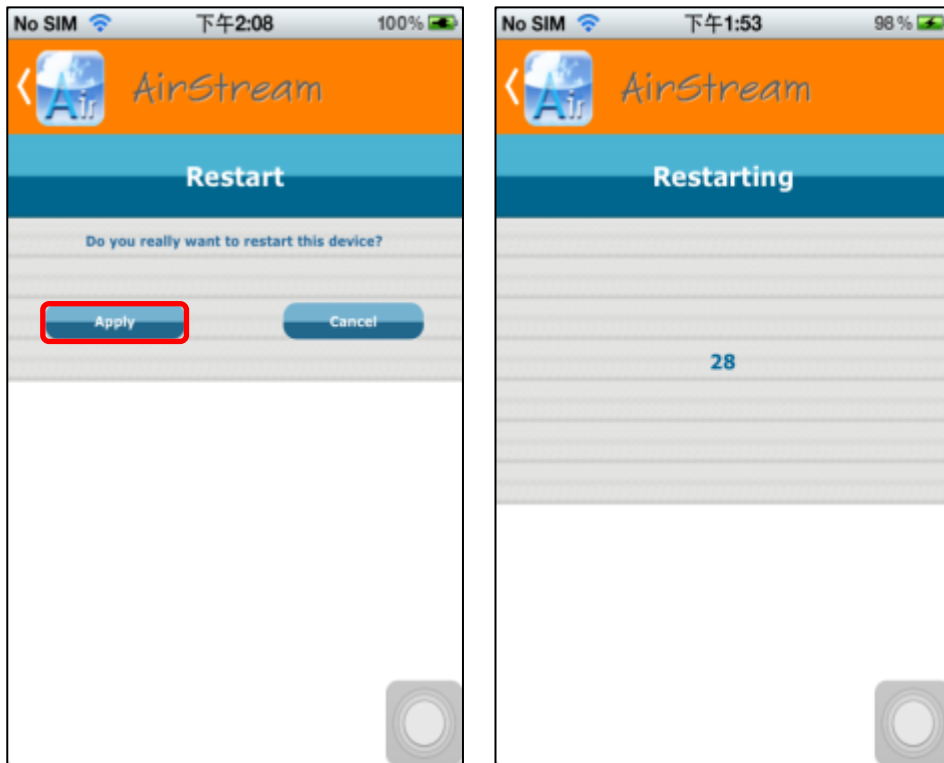

## iX. Firmware Upgrade

Upgrade the firmware when there is a new update available. You can upgrade the Portable Wireless Hard Drive by uploading new firmware.

 
1. Download the firmware file to a computer.
2. Connect with the Portable Wireless Hard Drive using that computer.
3. Tap **Choose file** to search for the upgrade firmware in the USB drive.
4. Tap **Upload** after the firmware file is chosen. Or tap **Cancel** to leave.

Do not shut down power during upload.



## X. Shutdown


Tap **Apply** to shut down the device, or tap **Cancel** to leave.

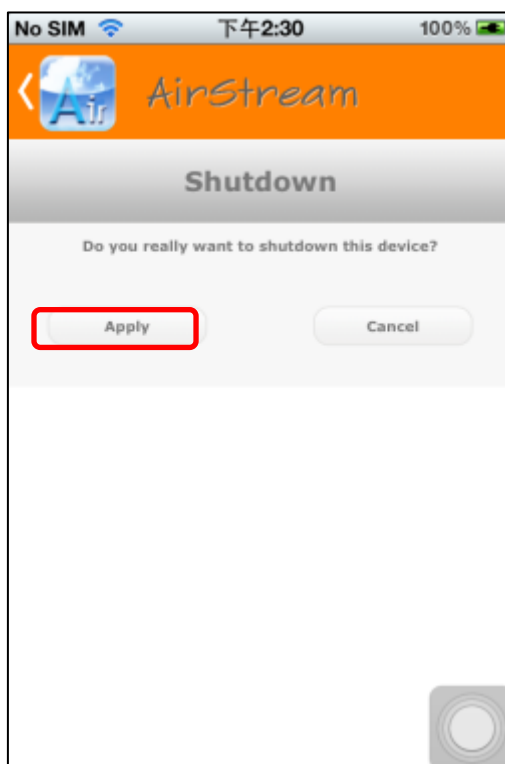

## Xi. Factory Default

Tap **Apply** to reset settings to default value.

 
The Maxell Portable Wireless Hard Drive will restart.

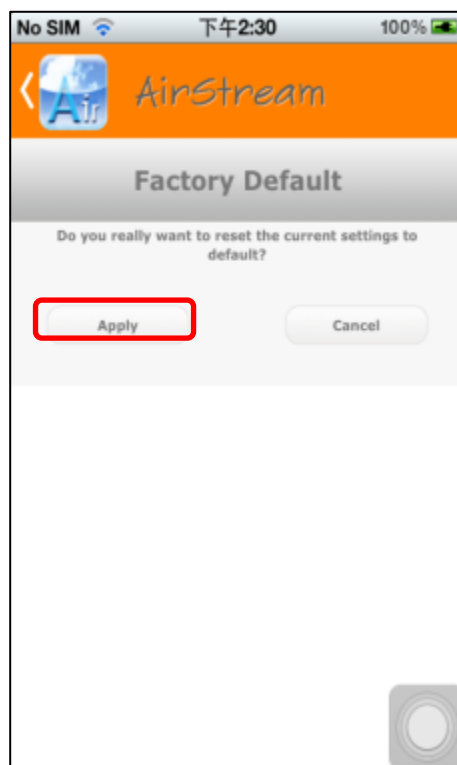

## Xii. Language

Select a language for the app interface.

 Tap **Apply** to confirm, or tap **Cancel** to leave.

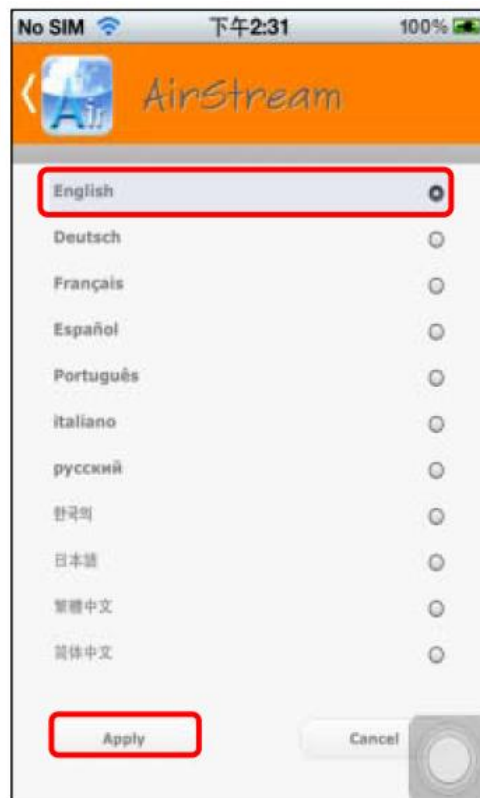

- REMARK: Please charge the Maxell Portable Wireless Hard Drive fully after each use, sudden power outage during operation can result in damage/or loss of your data.



## Air-Stream Manual for Android

 
<Use an Android smartphone to connect remote Air-Stream Device>

Step1: Go to [Google play Store](#) search [Air-Stream](#) App (iOS / App Store), and download it.

Step2: After installing Air-Stream App, power on the device to link to Wi-Fi.

Tap [Wi-Stream\\_XXX](#) on the Wi-Fi Manager, and then enter password **12345678**.

Step3. Launch Air-Stream by tapping the icon to login Air-Stream  App.

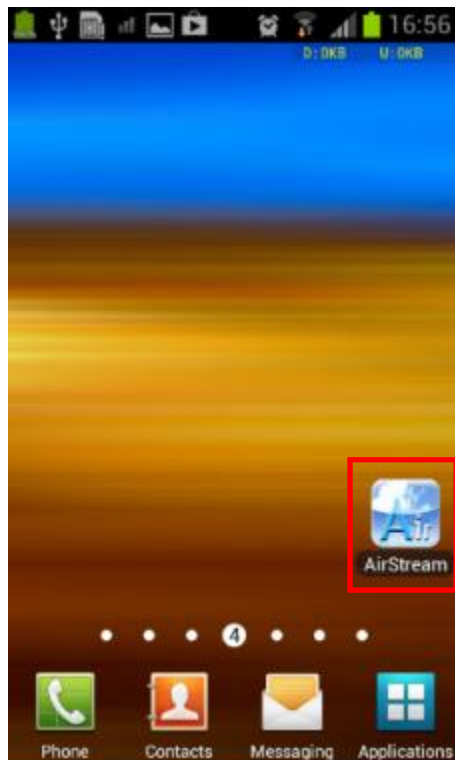

## VIII. Browse files


Browse all files, including documents, music, photos, and videos, on the remote device, or the local files on the local side.


To browse MP3 files as an example. All files> Music > \*.mp3

 
 
Step 1. Tap **All Files**

Step 2. Tap **music** folder to browse all MP3 files.

Step 3. Tap a file to play music.

Back: Tap the icon  on the gray bar to go back the former layer.

Main menu: Tap icon on  the upper left corner to return to main menu.

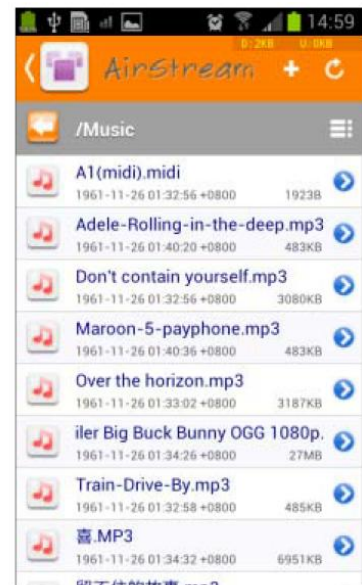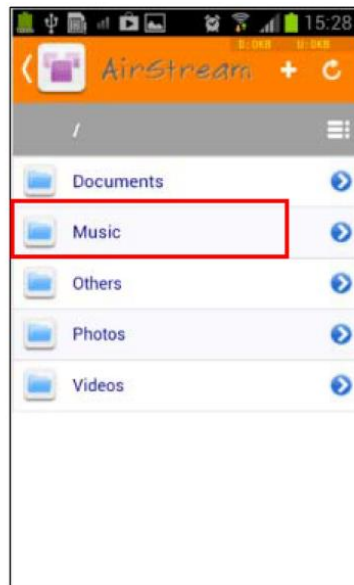

## IX. Upload files




Upload files from the local files to remote device.

Upload files from **Local Files** to the remote device. App will upload files to target folder according to filename extensions, including documents, music, photos, and videos. Other kinds of files will go to **Others** file folder.

Example on how to upload music files.

 
Step 1. Tap **Local Files**.

Step 2. Tap **Music**

Step 3. Select music files  **Music** and tap upload , or tap  to select all music files.

Step 4. Tap **Upload** on the gray bar at the bottom. Or tap **X** to cancel.

You can use the same way to upload other files such as documents, photos, videos, and other kinds of files.

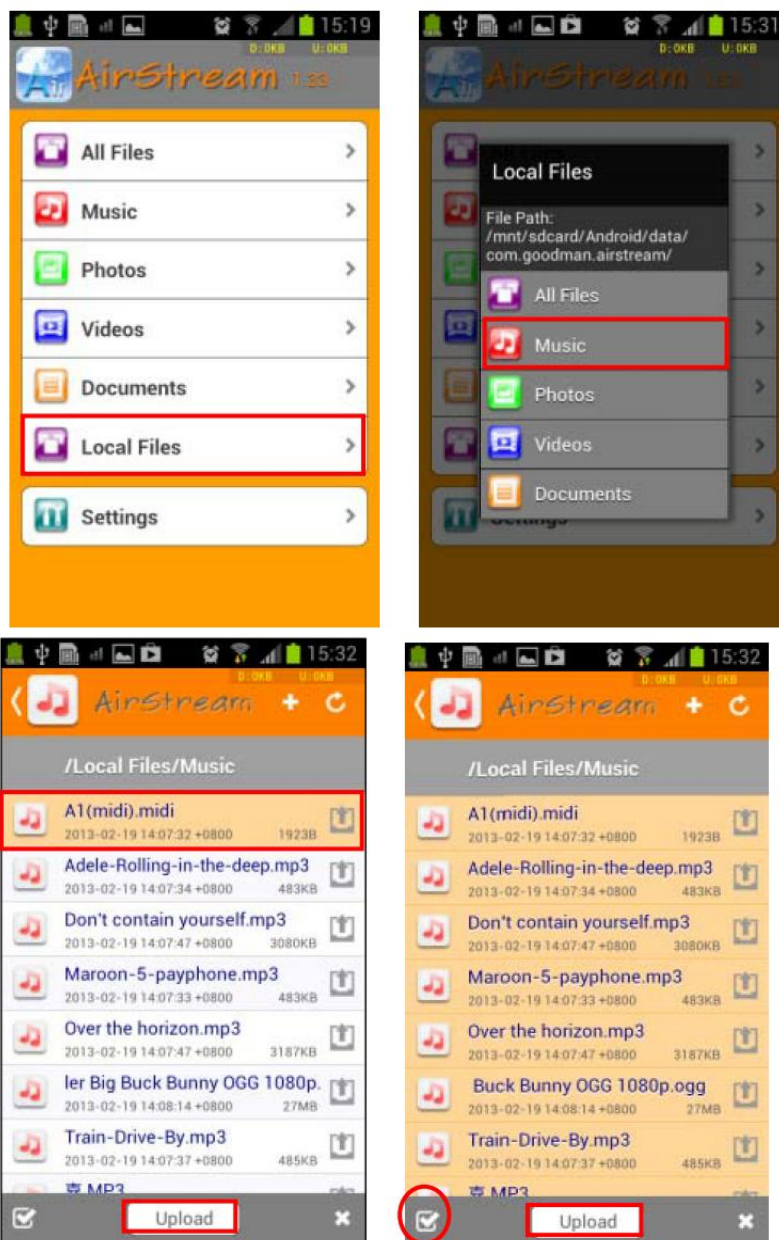

## X. Download files

Download files from the remote device to local files. User can open the files by their installed apps in their Android device.

There are 2 ways to download files.

For example:

1. All Files > Music > \*.mp3

 
Step 1. Tap **All Files** > **Music**

Step 2. Tap the blue icon on the right side of a music file

Step 3. Select **Download**, or tap to select all music files.

Step 4. Tap **Download** on the gray bar at the bottom. Or tap **X** to cancel.

You can use the same way to download other files such as documents, photos, videos, and other kinds of files.

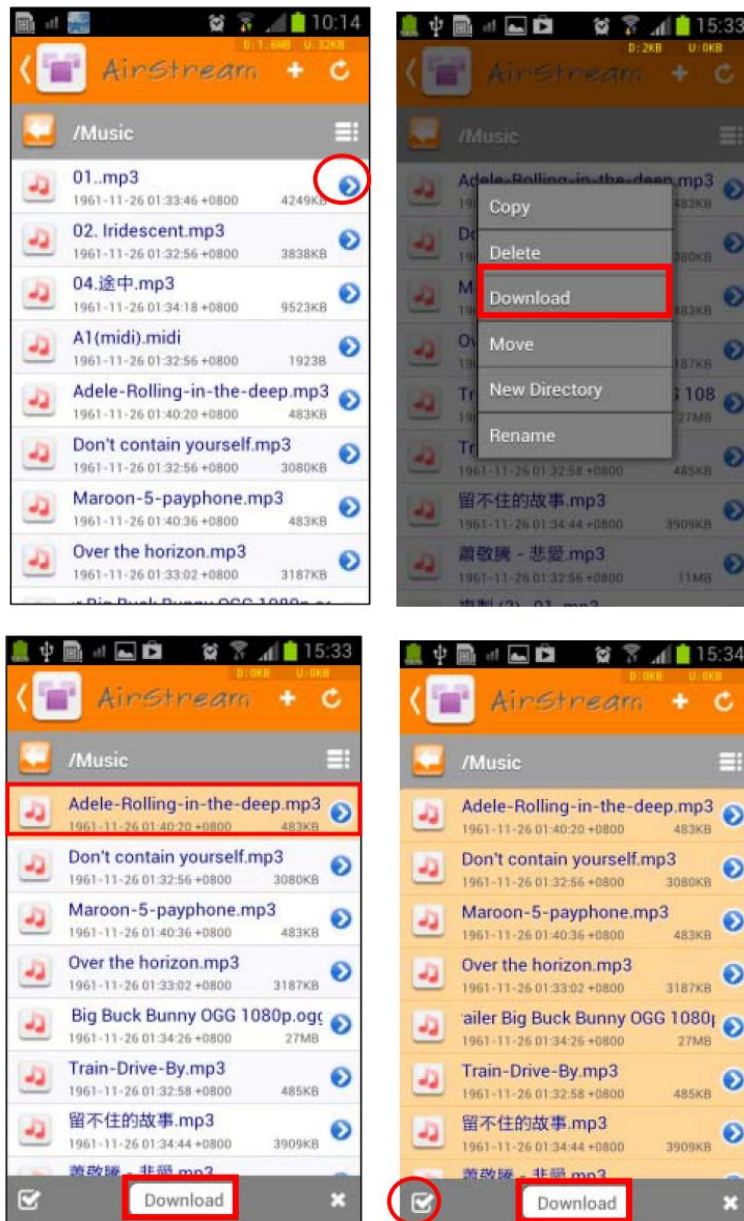


## 2. Music > \*.mp3

Step 1. Tap **Music**

Step 2. Select music files and tap , or tap  to select all music files.

Step 3. Tap **Download** on the gray bar at the bottom. Or tap **X** to cancel the action.

 You can use the same way to download other files such as documents, photos, videos, and other kinds of files.

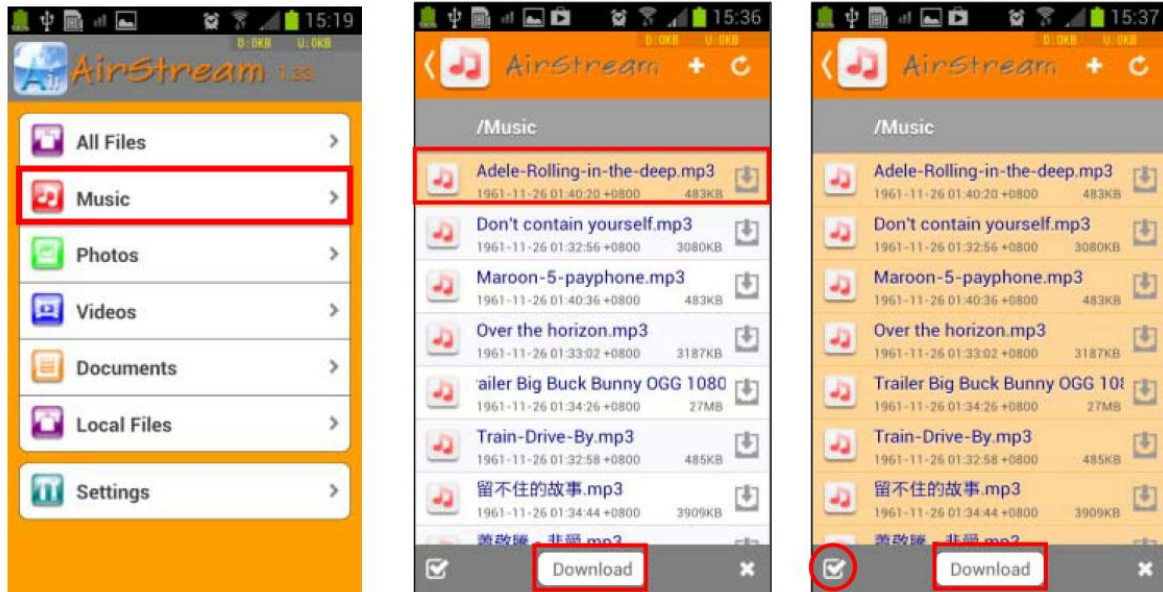



## XI. Move files & folders

### Move a file

Move a file from a files folder to a target folder:

To move a music file as an example:

All Files > Music

Step 1. Tap **All Files** and then tap **Music**

 
Step 2. Tap the blue icon on the right of a music file.

Step 3. Select **Move**

Step 4. Go to target folder. Ex. /Music → / **Others**

Step 5. tap **Move** on the bottom bar. Or tap **X** to cancel.

You can use the same way to move other files such as documents, photos, videos, and other kinds of files.

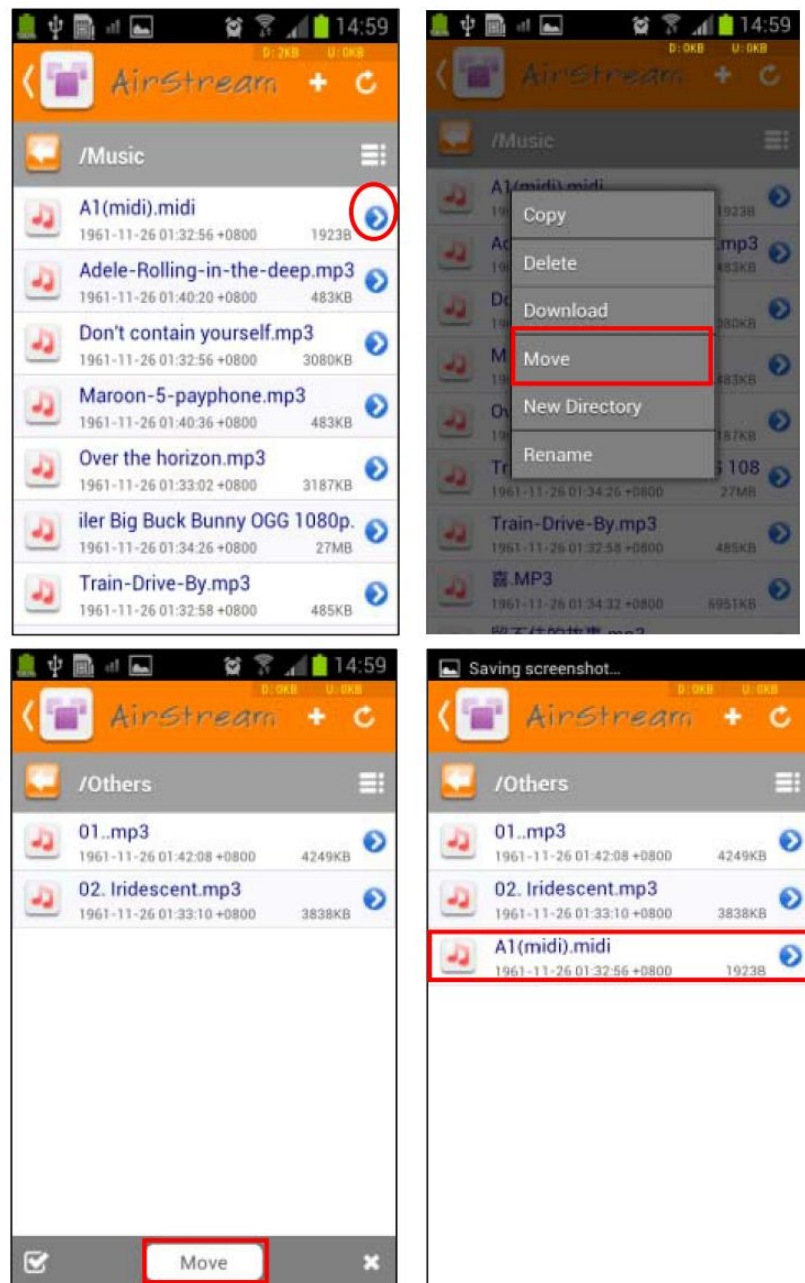

## Move a file folder

Move a file folder to a target file folder.

To move a file folder named 01. favorite as an example:

(Please see introduction of New Directory to add a new folder)

All Files > 01.favorite → All Files > Music > 01. favorite

Step 1. Tap **All Files**

 
Step 2. Tap the blue icon on the right to the folder.

Step 3. Select **Move**.

Step 4. Tap **Music** folder

Step 5. Tap **Move** on the bottom bar. Or tap **X** to cancel.

You can use the same way to move other file folders such as documents, photos, videos, and other kinds of file

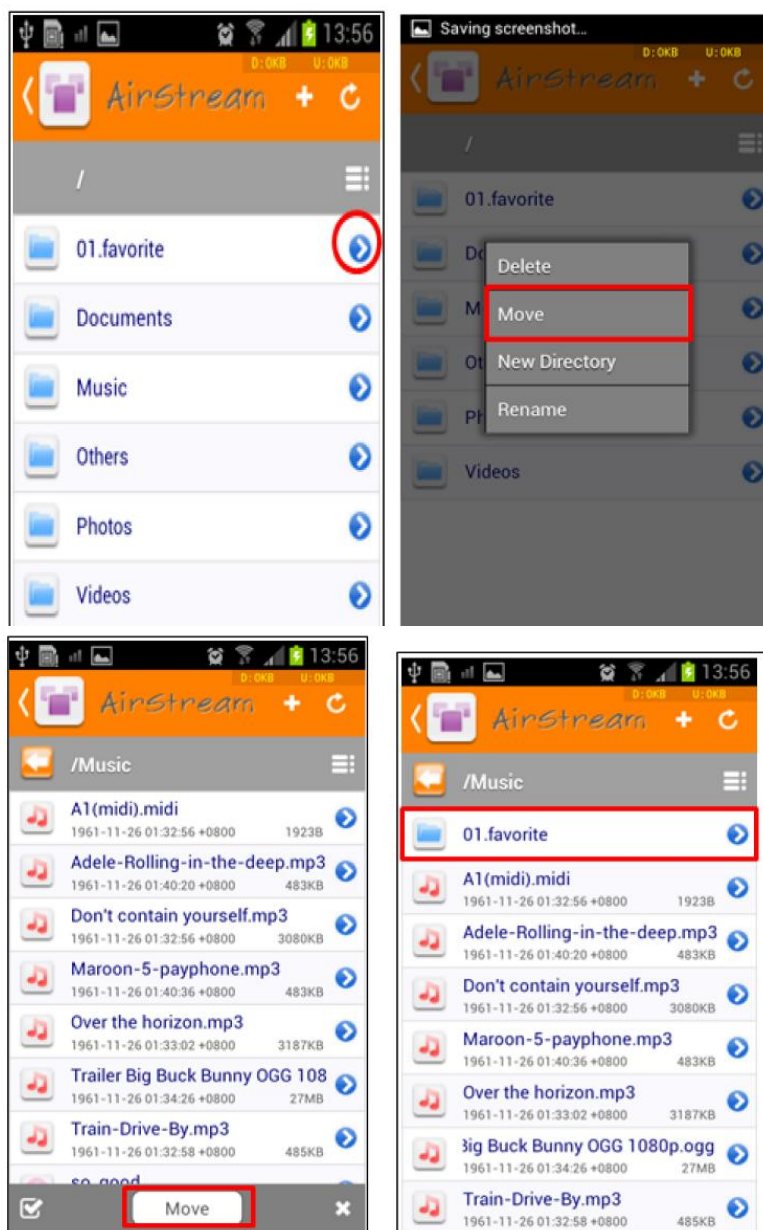

## XII. Copy files.

Copy files and paste to the target file folder.  
Copy a music file as an example.

All Files > Music > \*.mp3 → Others >

Step 1. Go to All Files > Music.

 
Step 2. Tap the blue icon on the right of a music file.

Step 3. Select **Copy**.

Step 4. Go to target folder. Ex. / Music → > **Others** /

Step 5. Tap **Paste**. Or tap **X** to cancel.

You can use the same way to copy other file folders such as documents, photos, videos, and other kinds of file

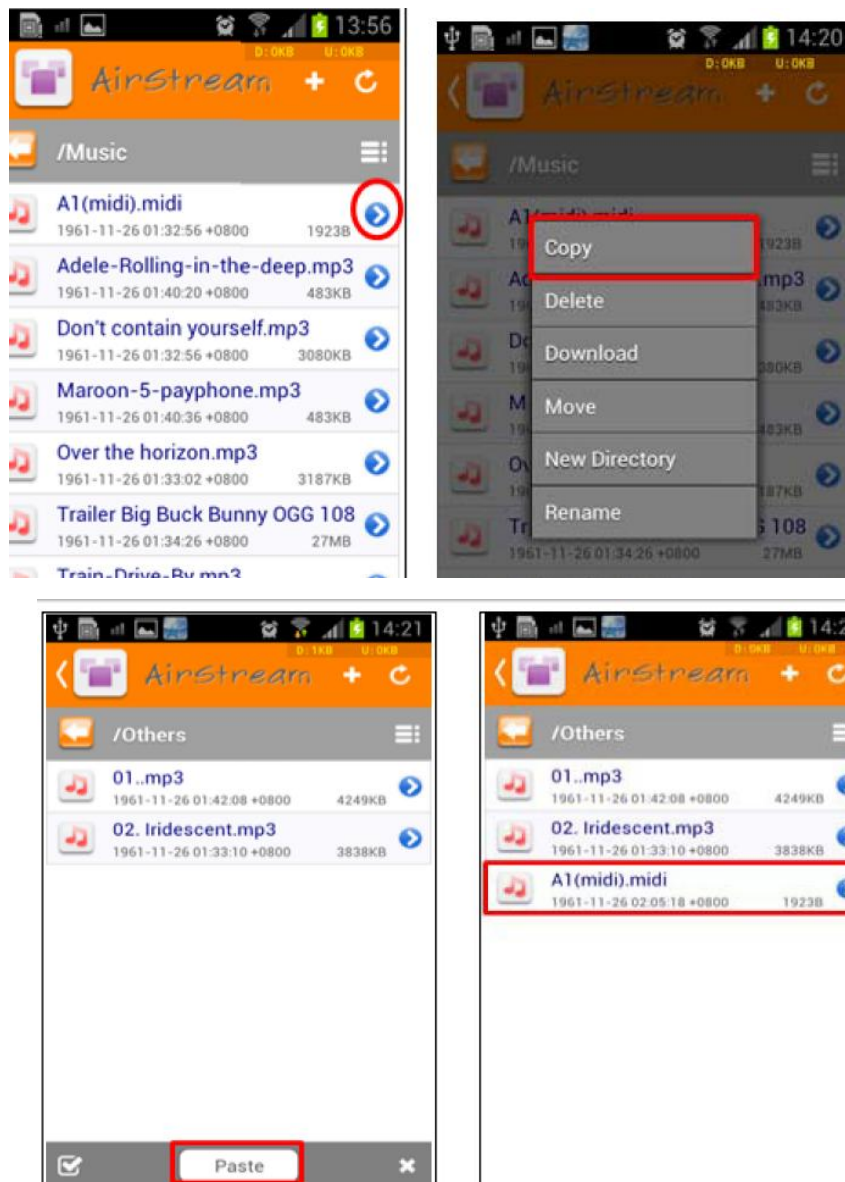



### XIII. File Folder Variation

#### i. Rename

Rename for file folders or files.

Example. Rename Don't contain yourself.mp3 to be 01.Don't contain yourself.mp3.

 
All Files > music/

Step 1. Tap the blue icon next to the file you want to rename. ex. Don't contain yourself.mp3

Step 2. Select Rename.

Step 4. Modify file name 01.Don't contain yourself.mp3 and tap OK. Or to tap Cancel to cancel.

You can use the same way to rename other file folders such as documents, photos, videos, and other kinds of file

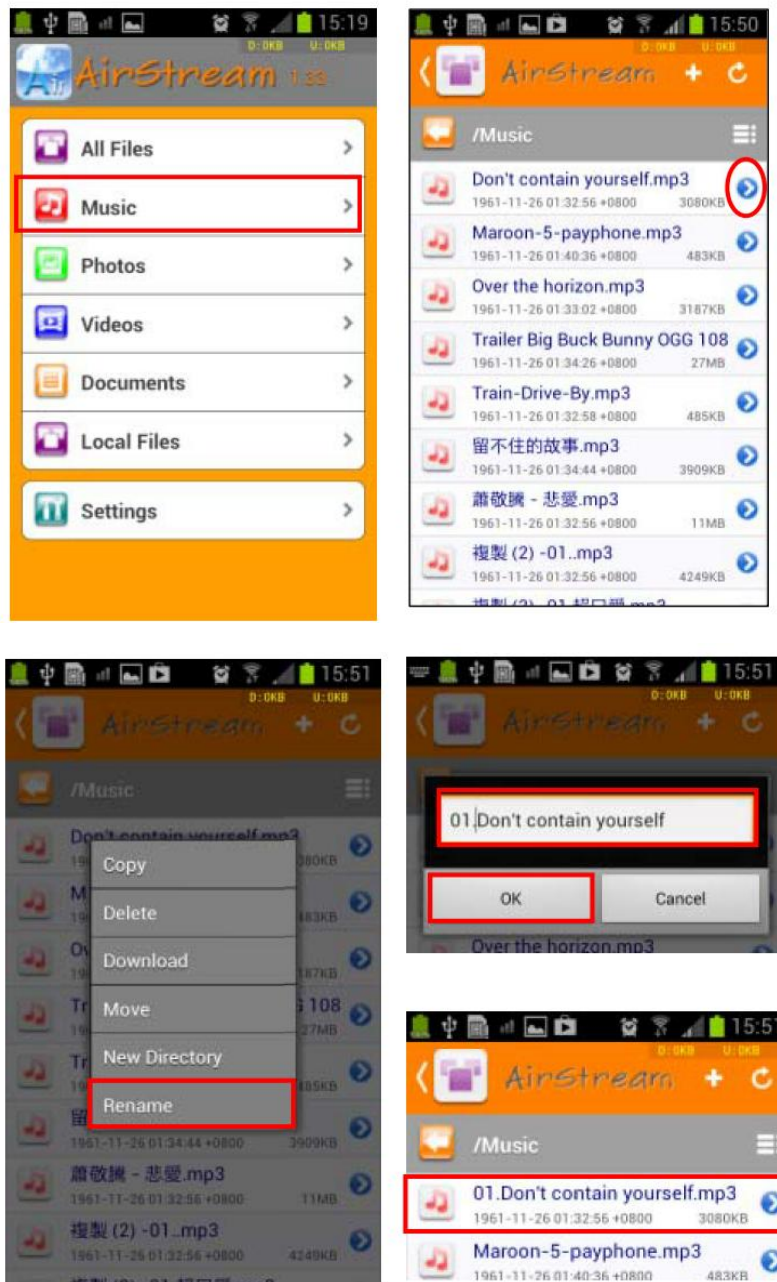

## ii. New Directory

Add a new file folder.

There are two ways to add new file folders.

 
 
### 1. All Files >

Step 1. Tap the blue icon next to a file folder (Document/ Music / Photos/ Videos).

Step 2. Tap **New Directory**.

Step 3. Enter a name for the new folder.

Step 4. Tap **OK**. or tap **Cancel** to cancel.

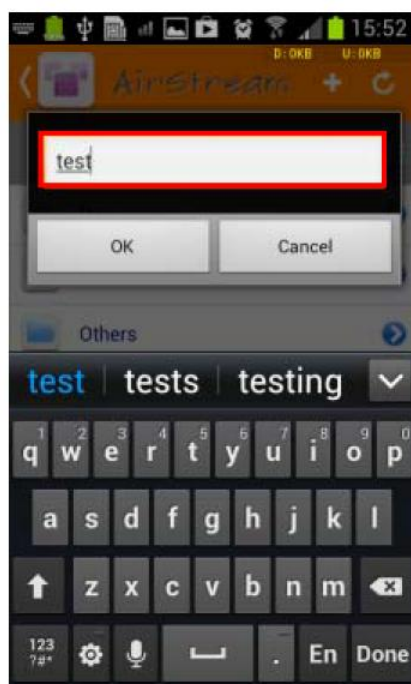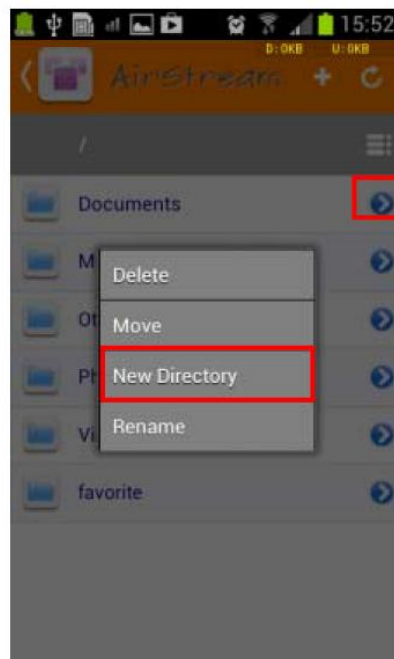





## 2 .All Files >

Step 1. Tap the gray icon on the  upper right.

Step 2. Tap **New Directory**.

Step 3. Enter a new name for the new folder.

    Step 4. Tap **OK**. Or tap **Cancel** to give up.

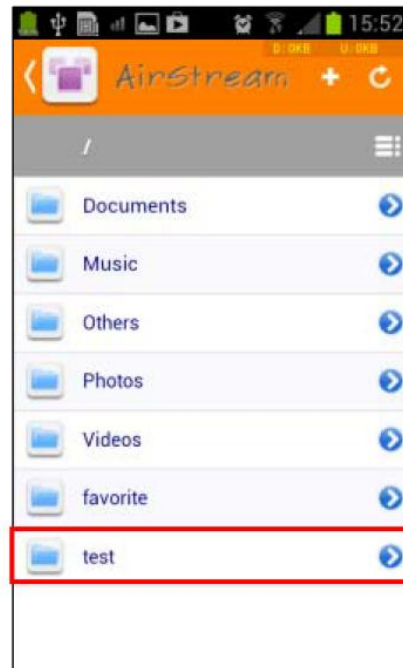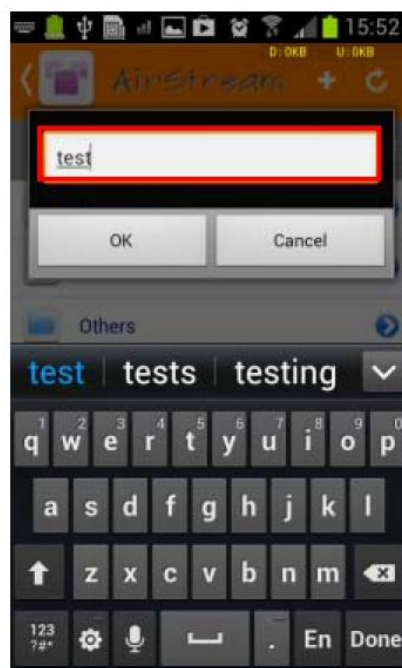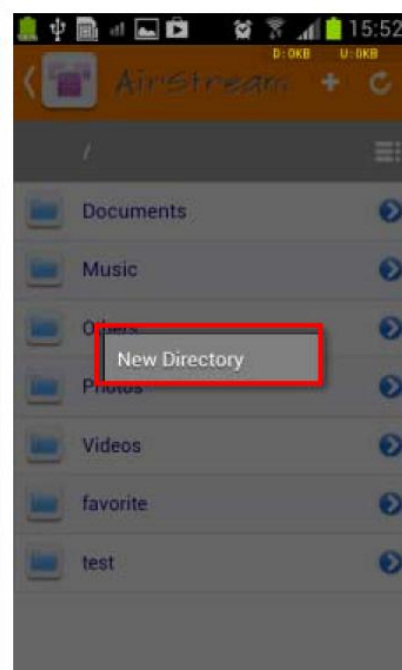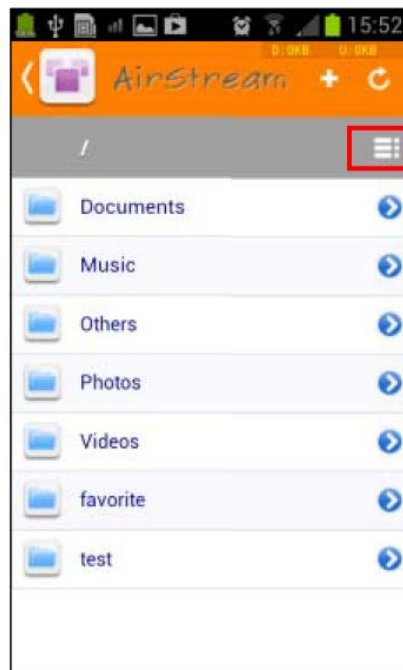

### iii. Delete Files

Delete files or file folders.

Delete file folders.

 
Ex. All Files/

 
 
Step 1. Tap the blue icon next to the file folder that you want to delete.

Step 2. Select **Delete**.




Step 3. Tap **Yes** to confirm. Or tap **No** to cancel.

If you delete the default folder, like Documents, Others, Photos, Videos, or Music, it will be rebuilt once the device restarts.

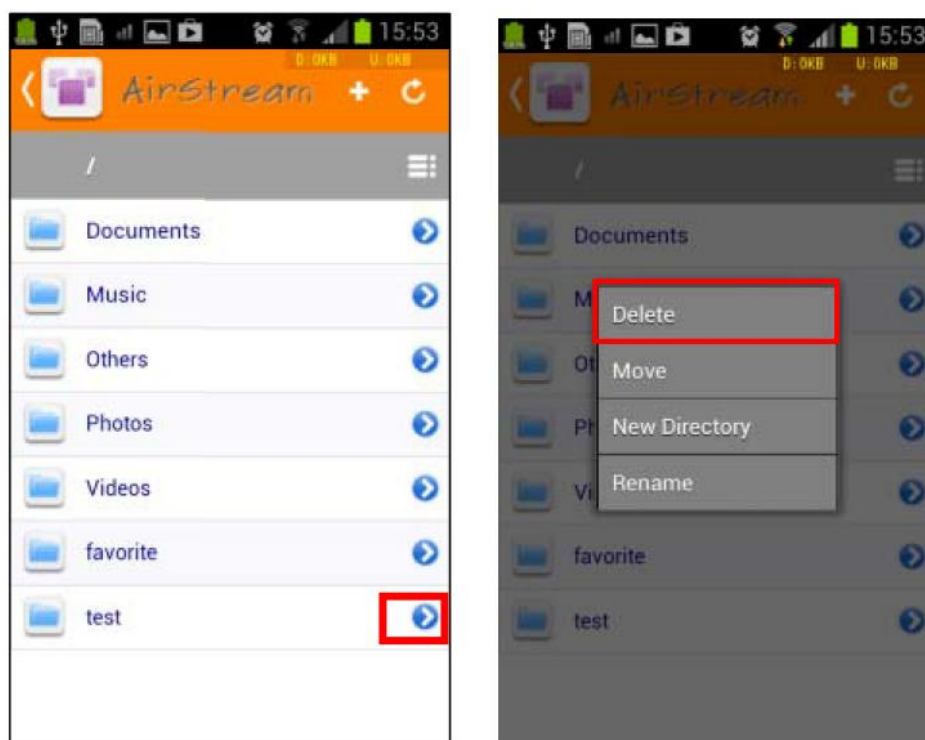

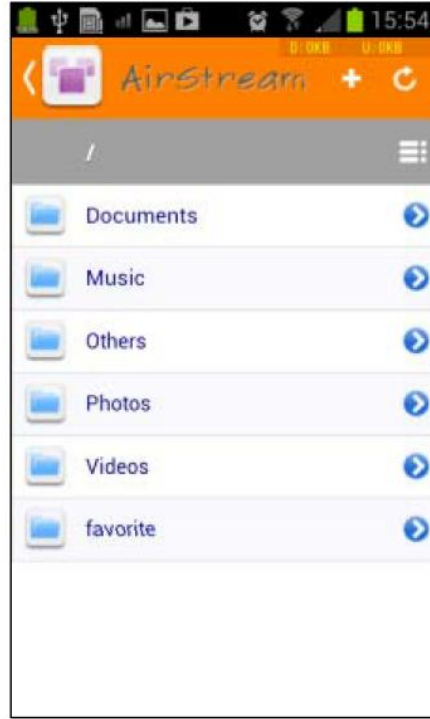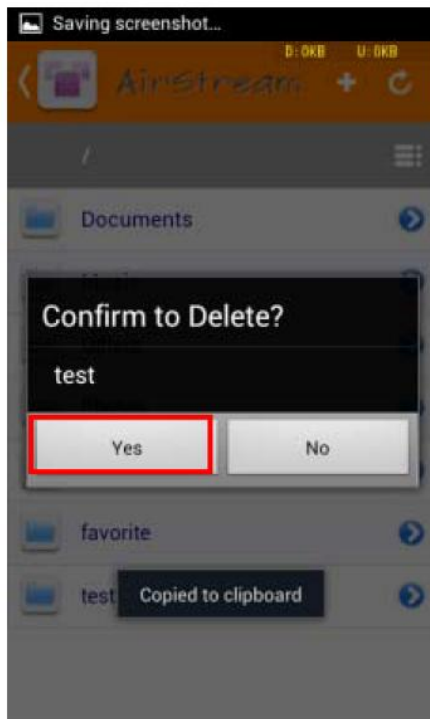

   1. Delete files.  
Ex. All Files>Music/  
Step 1. Tap the blue icon next to the file you want to delete.  
Step 2. Select **Delete**  
Step 3. Tap **Yes** to confirm. Or tap **No** to cancel.

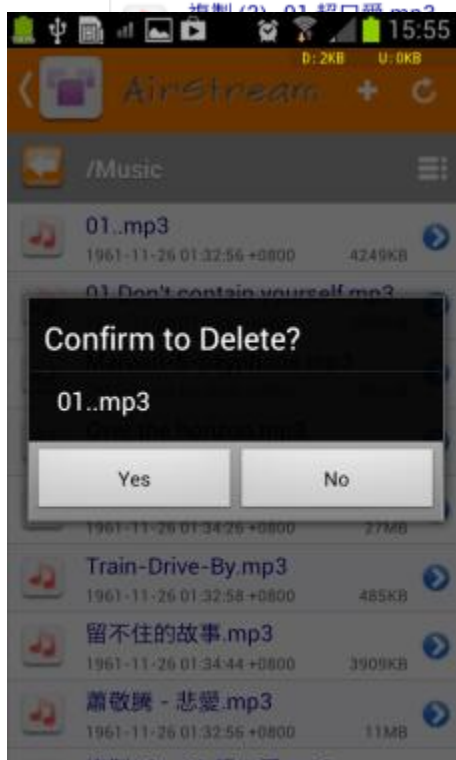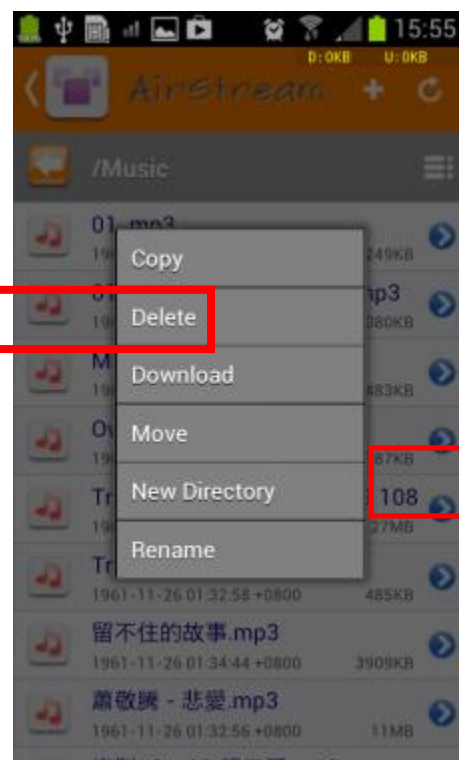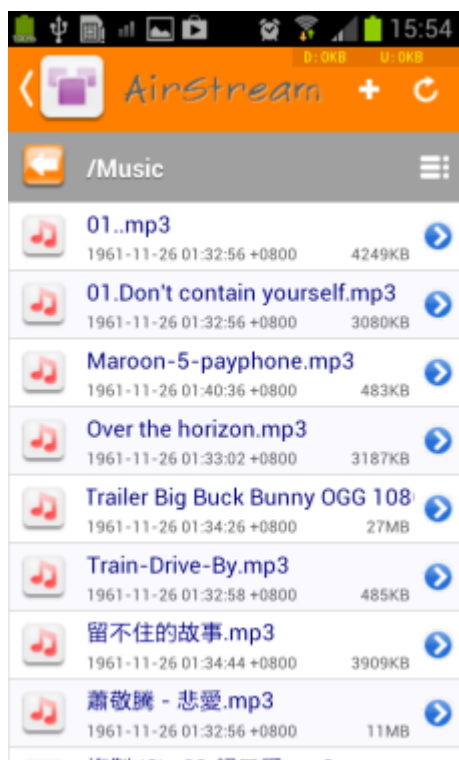





## XIV. Settings

### i. Enter Username & Password

Once you tap **Settings**, it will pop up a login box, asking you to enter the username (**admin**) and your password (**admin**).

  Then tap **Login**.

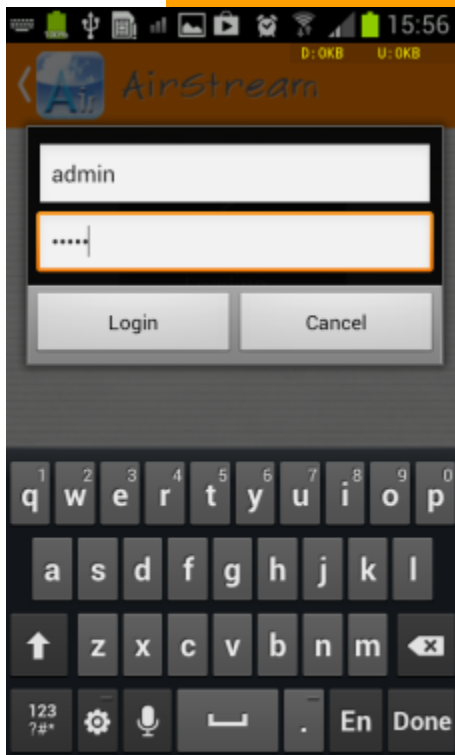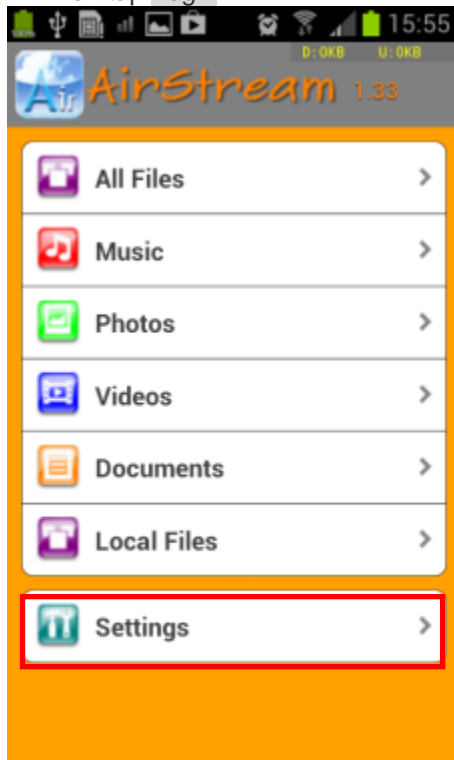


## ii. Device Name.


You can rename the device.

Step 1. Tap Device Name.

  Step 2. Enter new device name and tap Apply.

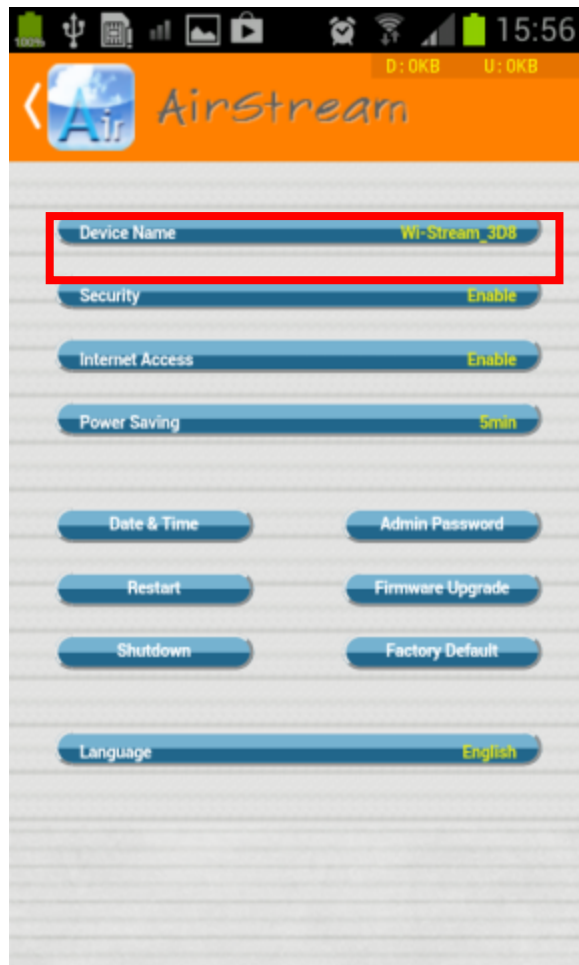





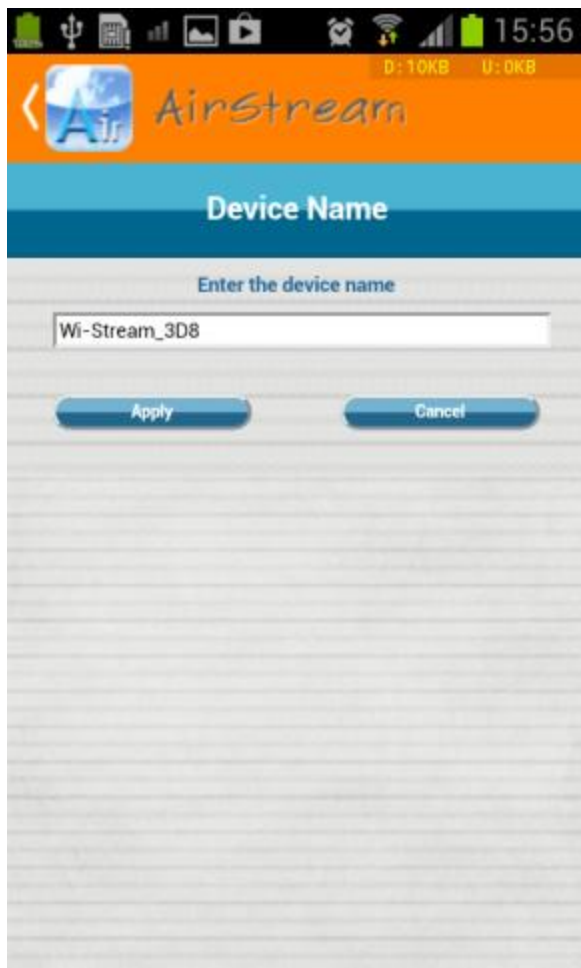

iii. Security

Set up security password and security status.

  - a. Default password is **12345678**.
- b. Security Status:
  - i. **Enable** means to enter password (**12345678**) when login the device.
  - ii. **Disable** means to skip password when login the device.

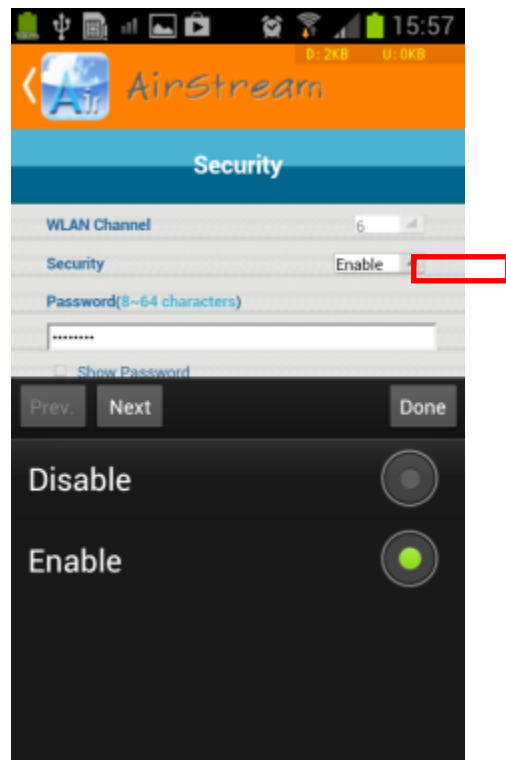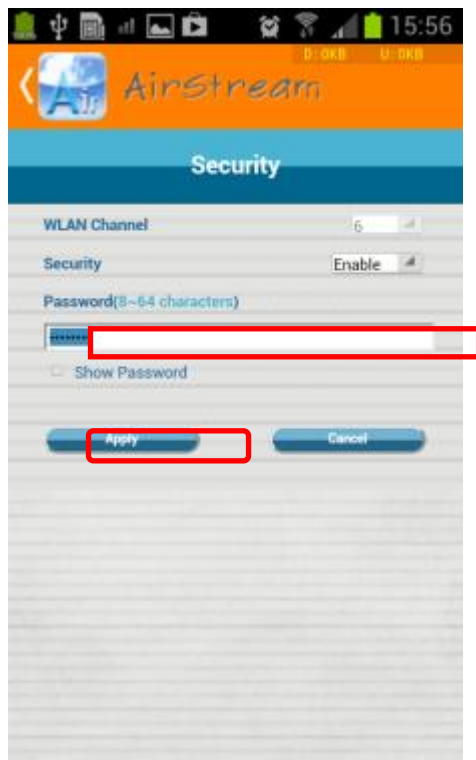

#### iv. Internet Access

Disable means the device doesn't open Internet access, and it only provides Wi-Fi connection with the Notebook or the smartphone.

Enable means the device provides Internet access, which lets users connect to the internet.

Step 1. Tap Enable to turn on Bridge mode. The device will search available internet accesses.

 
 
Step 2. Tap certain internet access and tap Apply.

Step 3. Provide internet password, and then tap Connect.

Step 4. The device will request to restart.

Step 5. Tap OK and it will pop up a restarting countdown message.



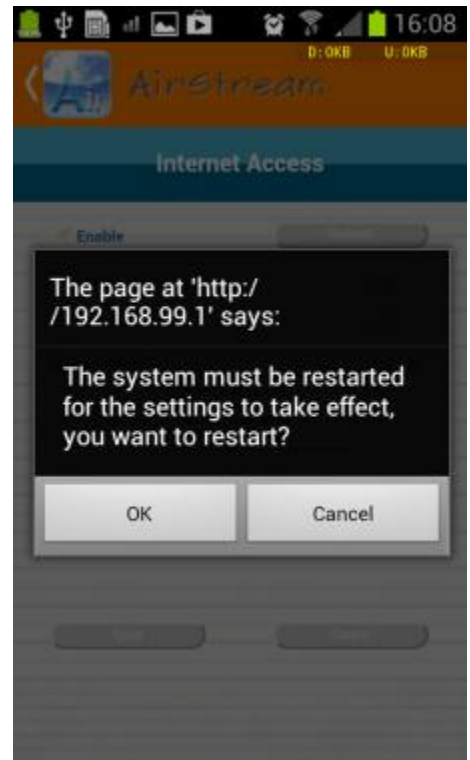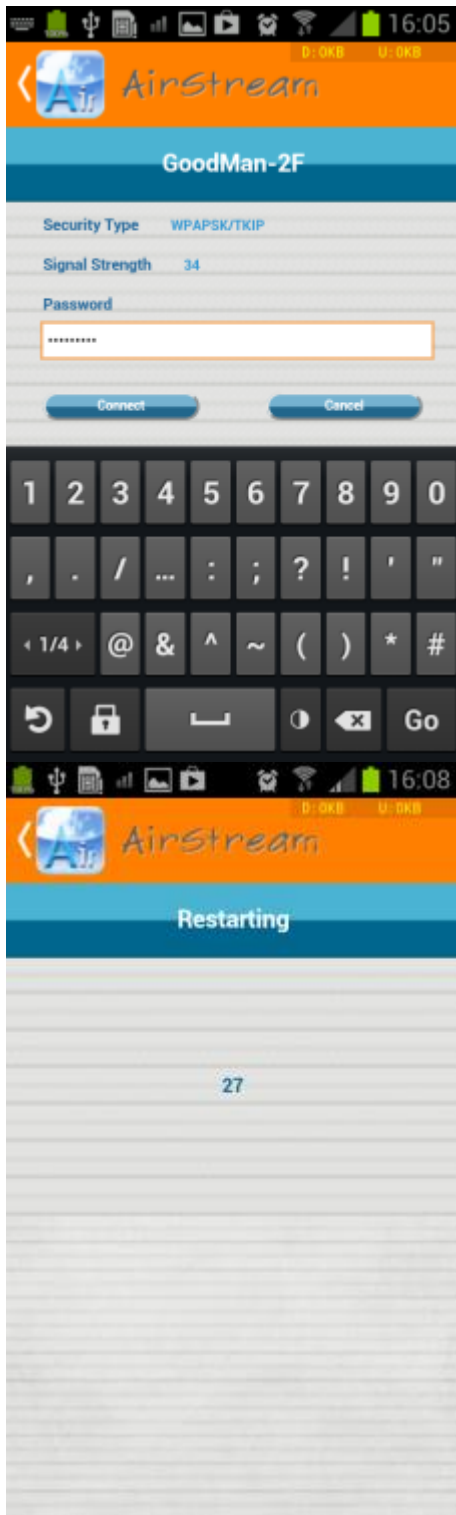

#### v. Power Saving

 
Set up idle time (5 min/ 10 min/ 30min) to avoid power consuming because of idling for too long. The device will shut down after idle time. None means not to operate power saving function. Select idle time and tap Apply to confirm; otherwise Cancel the action.



#### vi. Date & Time

Date & Time will show up after file uploading or file downloading. There are two ways to set up:


1. Select Time Zone from the drop-down list and key in the date and time separately.
2. Tap Copy from PC to get information from Notebook or smartphone directly.
3. Tap Apply to confirm. Or tap Cancel to leave.

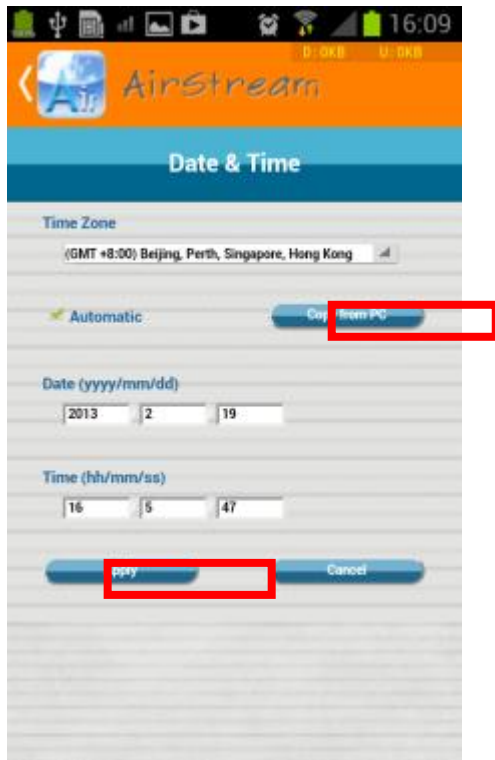

## vii. Admin Password

Change password when login Settings page.

 
Enter the new password and confirm the new password. Tap **Apply** to set up new admin password, or **Cancel** and leave.

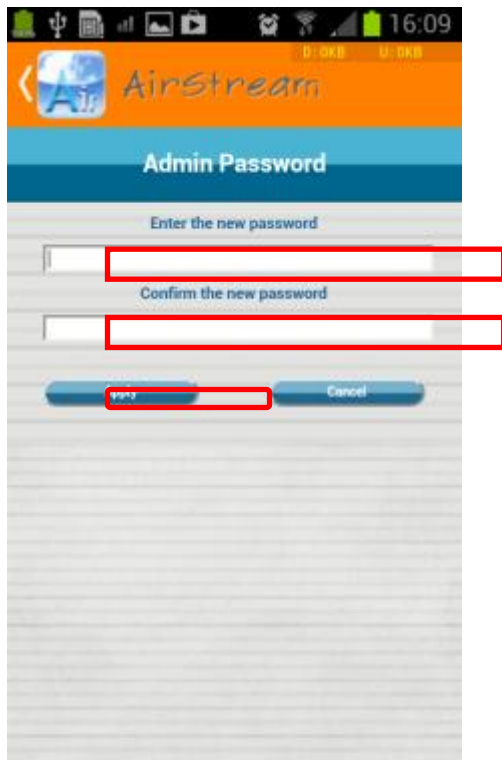

The screenshot shows the 'Admin Password' settings page in the Airstream application. The page has a blue header with the Airstream logo and title. Below the header, there are two text input fields: 'Enter the new password' and 'Confirm the new password'. Both fields are highlighted with red rectangles. At the bottom of the form, there are two buttons: 'Apply' and 'Cancel'. The 'Apply' button is also highlighted with a red rectangle. The status bar at the top shows the time as 16:09 and various system icons.

viii. Restart

 Restart the device. Tap **Apply** to restart, or tap **Cancel** to leave.

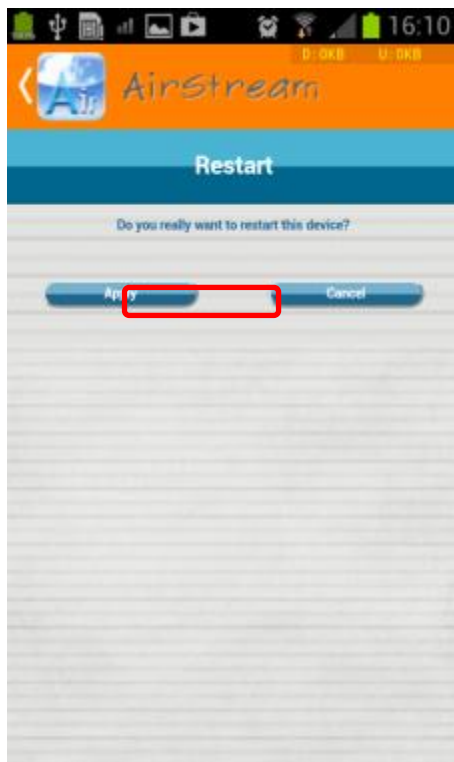



## ix. Firmware Upgrade.

Upgrade firmware when there is a new update available.

 
1. Choose firmware file from computer and
2. Switch the device to Reader mode and insert the USB drive.
3. Tap **Choose file** to search for the upgrade firmware in the USB drive.
4. Tap **Upload** after a file is chosen. Or tap **Cancel** to leave.

Please do not shut down power during upload.




x. Shutdown

Tap **Apply** to shut down the device, or tap **Cancel** to leave.

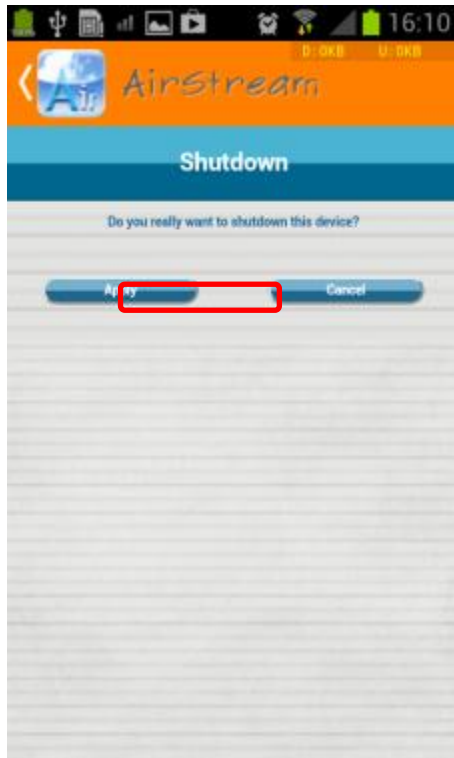

xi. Factory Default

 Tap Apply to reset settings to default value.  
Then device will restart

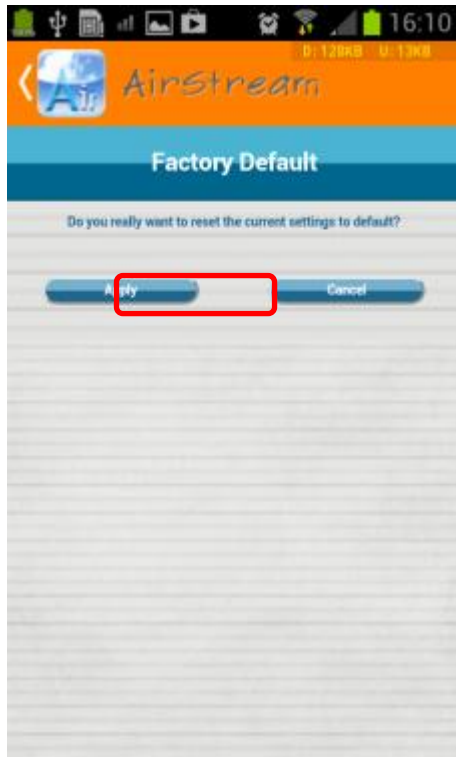

xii. Language

Select a language for the device. Tap **Apply** to confirm, or tap **Cancel** to leave.



## Troubleshooting

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using this unit, check the following points before requesting for service. Warranty void if case is opened.

Symptom	Likely Cause	What to do
No LED lights come on after the on/off button is pressed	Battery is empty	<ul style="list-style-type: none"><li>• Charge with USB AC adapter or computer via USB cable. Green charging light will light up during charging.</li></ul>
	Power is not switched on	<ul style="list-style-type: none"><li>• Switch on power and verify that power LED is on. (Middle white LED flashing)</li></ul>
Portable Wireless HDD suddenly stops working	Triggered auto-off function (no operation left for too long)	<ul style="list-style-type: none"><li>• Press on/off button to turn on again</li><li>• See symptom above.</li></ul>
I can see the Wifi connection but I cannot connect from my mobile device	Wifi password incorrect	<ul style="list-style-type: none"><li>• Check Wifi password(Upper/lower case must be exactly the same)</li></ul>
	Wifi encryption not compatible	<ul style="list-style-type: none"><li>• Use different wireless encryption method. Please refer to Security section for setting up wireless encryption.</li></ul>
	Wrong Wifi network selected	<ul style="list-style-type: none"><li>• Check and make sure the SSID is correct and connect again.</li></ul>
I have forgotten the Wifi password I have set up	-	<ul style="list-style-type: none"><li>• Please refer to Resetting the Maxell Portable Wireless Hard Drive section</li></ul>
The Portable Wireless Hard Drive is not showing up on my PC/Notebook	Not enough power in the Portable Wireless Hard Drive	<ul style="list-style-type: none"><li>• Please plug in the Maxell Portable Wireless Hard Drive into the root connector of your PC/Notebook USB port.</li><li>• Make sure the green charging light is on</li></ul>

		before you turn on the Maxell Portable Wireless Hard Drive.
--	--	---

## Important Safety Instructions

Warning!
Do not use in a rainy or snowy place, by the waterside or in the bathroom. It may cause fire or electric shock.

Caution!
<b>Do not keep in an excessively hot place such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.</b> The surface of the device or parts may get damaged, and may also cause fire. Do not keep especially in a closed car in summer, and in a place where sunlight directly falls or near a stove. This may cause leakage of battery fluid.
Always use 5V 2A (EIAJ-2) for DC power supply of this product, using wrong voltage AC adapter may cause damage to the product and may cause fire/smoke when over voltage is used. (AC adapter not included)

Disclaimer
<ul style="list-style-type: none"> <li>- MAXELL shall not be liable for any damages and/or loss of data during data transfer (or when power run out during operation.)</li> <li>- MAXELL shall not be liable for any damages and/or loss of data stored in products.</li> <li>- In no event shall MAXELL be liable under this statement for loss of profit, loss of anticipated savings, loss of data, or indirect, incidental or consequential losses or damages to the extent that those losses or damages can be disclaimed by law.</li> <li>- MAXELL under no circumstance will be responsible for the information or data stored in the MAXELL products claimed by warranty.</li> <li>- MAXELL recommends that customers back up all data periodically and before sending their products for warranty service.</li> <li>- MAXELL recommends that customers charge after every single time use.</li> </ul>

**Maxell's only obligation shall be to replace such quantity of the product proved to be defective in material or workmanship upon receipt. The user shall determine the suitability of the product for, intended use and assume all risk and liability in connection therewith.**

iPad, iPhone, iPod touch, iTunes are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

Google play is a trademark of Google Inc.

Design and specifications are subject to change without notice.

---